



Fall Protection

3M™ DBI-SALA® Confined Space Solutions

Get in easily.
Get out safely.

Confined Space. Unique challenges.

No two worksites are the same, but many of them have one thing in common: the presence of confined spaces. So how do you know if your worksite has one?

According to OSHA, confined spaces meet all of the following criteria:

- ▶ Large enough and so configured that an employee can bodily enter and perform assigned work
- ▶ Limited or restricted means for entry or exit
- ▶ Not designed for continuous employee occupancy

Some confined spaces require permits if there is a chance of serious health or safety concerns, such as engulfment, entrapment, asphyxiation or atmospheric hazards. For permit-required confined spaces where the worker enters to a depth of 5 ft. (1.5m) or greater, a mechanical means of retrieval is required and all entrants must use a full body harness. This rule applies to permit required confined spaces that cannot be declassified.

Augment your expectations.

The 3M Fall Protection Configurator App is coming soon — use augmented reality to configure and visualize 3M Confined Space solutions directly in your work environment, right from your mobile device.

Contact 3M for more information, or to schedule a site assessment.

Learn more at [3M.com/ConfinedSpace](https://www.3m.com/ConfinedSpace).



All permit required
confined spaces require
the use of a
full-body harness.

Spaces greater than

5ft.





in depth,
(unless
declassified)

also require a
**mechanical
retrieval device.**

Before you begin, start with a plan:

1. A site evaluation
2. Identification of proper safety equipment and other required tools
3. A trained rescue team that has developed a pre-planning program
4. Certified training that involves practice and hands-on experience for all parties who will work in and around a confined space



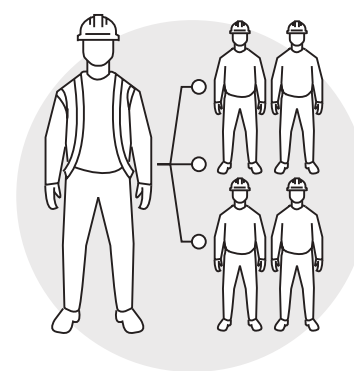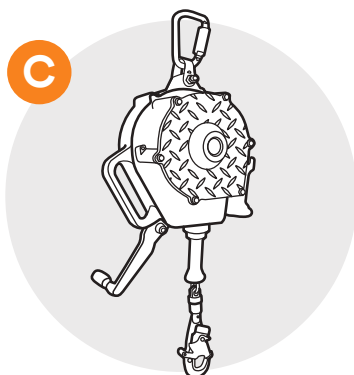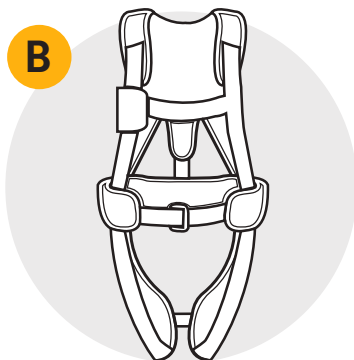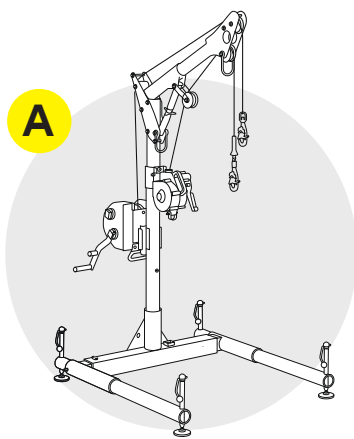

ABC's of Confined Spaces

A simple way to think about confined space solutions is by understanding the ABC's of Confined Spaces:

A Anchors

Davit systems, tripods and portable fall arrest posts are solutions where the worker's fall protection connector will be attached and is the main source of retrieval for the attendee. **Pgs. 6-23**

B Body Support

Harnesses and work seats are two types of solutions that are designed to support the weight of the worker's body. **Pgs. 26-27**

C Connectors

Winches and retrieval SRL's are the most common type of connector for confined spaces. **Pgs. 28-31**

Compatibility

See our chart for davit arm and base compatibility. (Accurate as of printing. See go.3M.com/ConfinedSpaceCompatibilityChart for most up-to-date information.) **Pgs. 24-25**

Education

Confined space training courses delivered in person or online can provide required knowledge about hazards and best practices. **Pg. 32**

Equipment you can trust. Expertise you can count on.

► **Complete solution provider:**

From personal protective equipment to davit arm systems, 3M is a one-stop shop for all of your confined space safety solution needs.

► **Trusted reputation:**

With over 60 years of experience, 3M™ DBI-SALA® Fall Protection has withstood the test of time and gained the trust of millions of workers around the world.

► **Quality first:**

3M's state-of-the-art manufacturing facilities are used to design, innovate, test, and produce safe and compliant solutions.

► **Versatility:**

We design solutions that are lightweight and modular to help ensure portability and meet the evolving needs of your worksite.



Design considerations for confined space systems

1 Do you need a vertical or horizontal system?

Vertical Entry

Consider vertical entry solutions if accessing the top of a tank, an underground utility vault, manhole, shaft, duct, pit or degreaser.

Horizontal Entry

Consider horizontal entry solutions if accessing the side of a boiler, tunnel, duct keel, void space, ballast or oil tank.



2 If choosing a vertical entry system, what reach and height are required?

Determine reach to the center of the entry point while considering overhead clearance limitations.

3 What number of workers are entering the space?

4 What type of system meets the needs of your application?

Permanent

Designed to be fastened to an existing structure to support the required loads. Typically intended to remain in one place for an extended period of time.

Freestanding


Does not require fastening or counterweight to support the required loads. Uses the system geometry to self-support.

Counterweighted

Utilizes counterweight or ballast to support the required loads.

Integrated

Designed to integrate with an existing structure or piece of equipment to support the required loads.

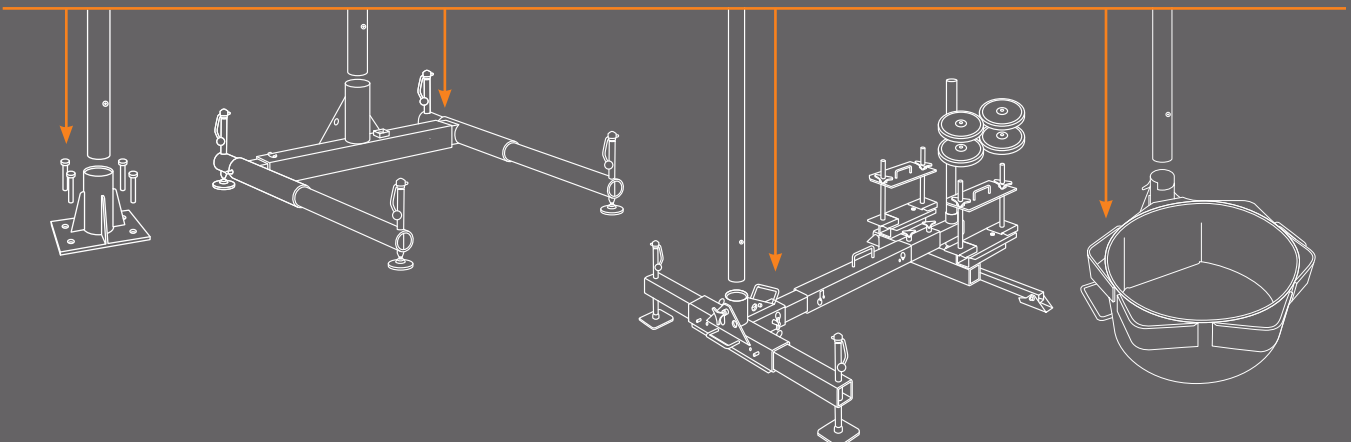

3M™ DBI-SALA®

Davit Arm System Components

Variable offset davits are designed for use where multiple offset masts are required. The variable offset masts may be equipped with front mounted and/or back mounted winches or Self-Retracting Lifelines (SRLs) and feature an anchor point rated up to 5,000 lbs. (22 kN). For applications with overhead clearance restrictions, the adjustable height of the variable offset masts can eliminate the need for custom length masts and mast extensions. Quick-connect/release pins allow for fast and easy setup, dismantle and transport.

1 Winch

Davits can be equipped with both primary and secondary (back-up) mechanical devices for added flexibility. Retrieval winches can be used in conjunction with a retrieval SRL or fall protection system to raise and lower personnel and equipment.

2 Quick-mounting brackets

Simple detent-style winch mounting brackets make installation fast and efficient. (See page 16 for options.)

3 Retrieval SRL

Retrieval SRLs offer fall protection as well as emergency retrieval for non-entry rescue.

4 Lower mast extensions

Allow the user to adjust the overall anchorage height of the system.

5 Base options

Several portable and fixed base options are available for complete versatility.

6 Variable offset mast

Adjustable length of davit ensures lifelines are always centered over confined space.

7 Built-in pulleys

Route lifelines of two mechanical devices for smooth, efficient operation.


8 Fall arrest anchorage

Up to a 5,000 lb. (22 kN) rated anchor point for fall arrest device.

9 Adjustable height

Eliminates the need for custom length masts and extensions.




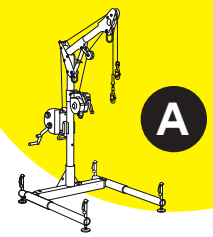

Davit Systems

Complete Davit Systems

Turnkey davit arm systems come with all the davit components, connecting devices, and accessories needed to get the job done.

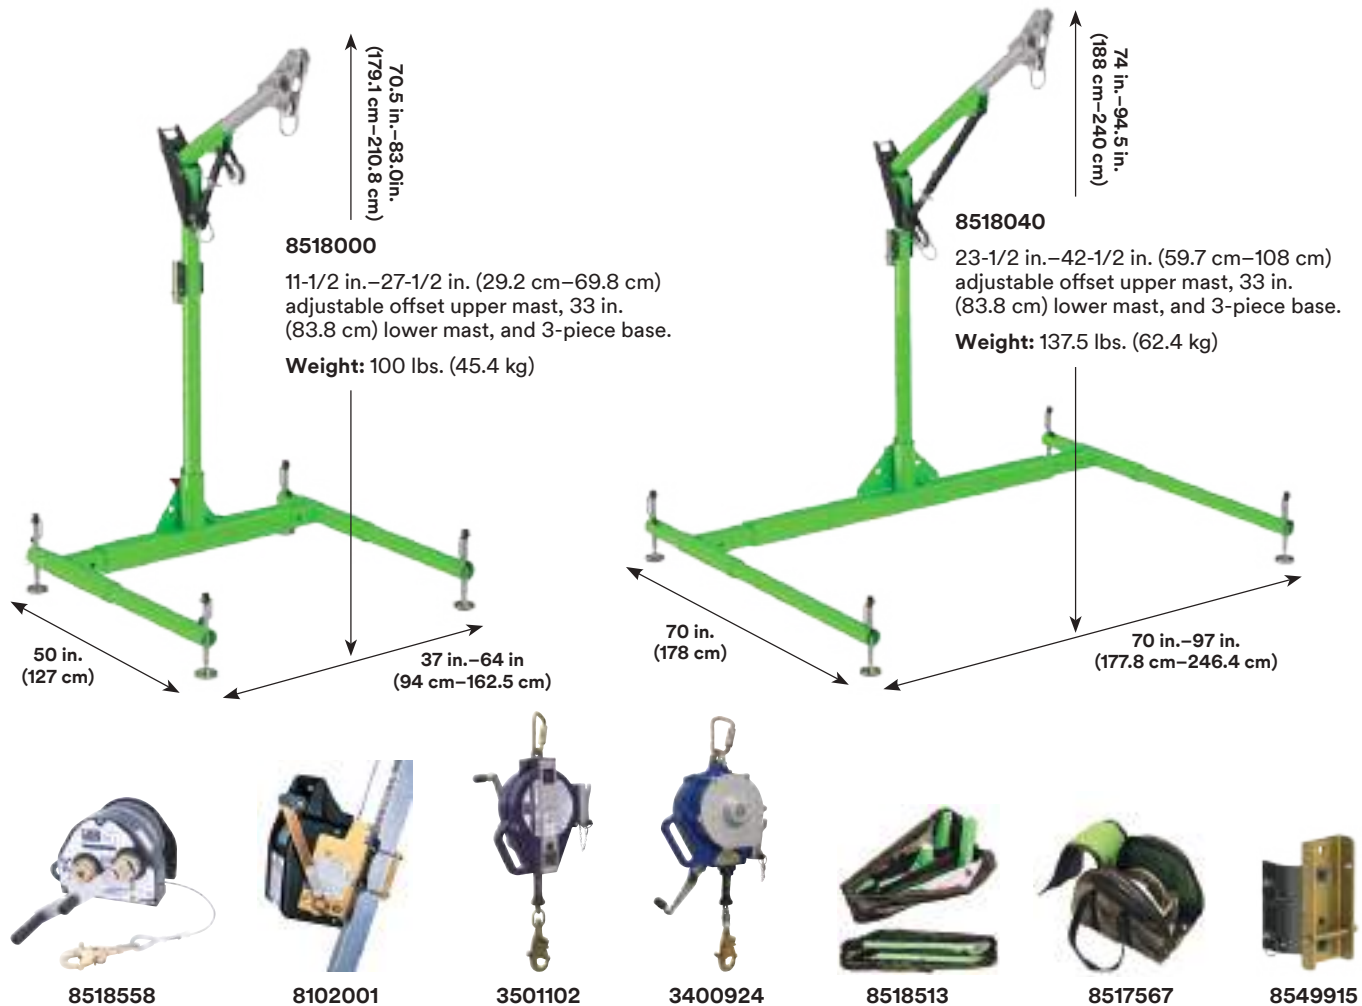

SKU	Short Reach 5-Piece Davit System	Long Reach 5-Piece Davit System	Digital Winch	Salalift™ II Winch	Ultra-Lok™ Retrieval SRL	Sealed-Blok™ Retrieval SRL	Davit Carrying Bags	Digital Winch Bags	Extra Winch Bracket
	8518000	8518040	8518558	8102001	3501102	3400924	8518513	8517567	8549915
8301100	■				■		■		
8301102	■		■				■	■	
8301103	■			■	■		■		■
8301105	■		■			■	■	■	■
8301107		■			■				
8301109		■	■					■	
8301110		■		■	■				■
8301112		■	■			■		■	■

Davit Systems (Cont.)


Davit Arm Systems



8530352

4-in-1 davit hoist system with integrated folding barrier. Includes winch/SRL mounting bracket.


Weight: 125 lbs. (56.7 kg)

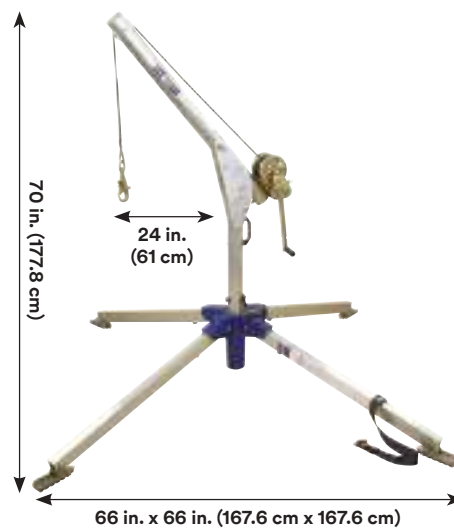

8302500


2-piece rescue davit system with folding base and arm, and 50 ft. (15.2 m) synthetic rope winch. Designed for rescue, retrieval, and descent applications only.

Weight: 76.2 lbs. (34.6 kg)

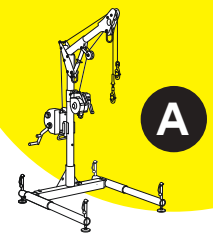

Configurable Davit Systems

Davit Arms - One Piece Adjustable Offset Davit Masts

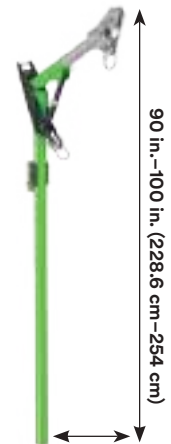					
66 in.-76 in. (167.6 cm-193 cm)	78 in.-88 in. (198.1 cm-223.5 cm)	90 in.-100 in. (228.6 cm-254 cm)	69.5 in.-87.5 in. (176.5 cm-222.2 cm)	81.5 in.-99.5 in. (207 cm-252.7 cm)	93.5 in.-111.5 in. (237.5 cm-283.2 cm)
11.5 in.-27.5 in. (29.2 cm-69.9 cm)	11.5 in.-27.5 in. (29.2 cm-69.9 cm)	11.5 in.-27.5 in. (29.2 cm-69.9 cm)	23.5 in.-42.5 in. (59.7 cm-108 cm)	23.5 in.-42.5 in. (59.7 cm-108 cm)	23.5 in.-42.5 in. (59.7 cm-108 cm)
8518382	8518383	8518384	8518385	8518386	8518387
Weight: 31 lbs. (14.1 kg)	Weight: 30.75 lbs. (13.9 kg)	Weight: 43.2 lbs. (19.6 kg)	Weight: 40 lbs. (18.1 kg)	Weight: 43.5 lbs. (19.7 kg)	Weight: 50 lbs. (22.7 kg)

Davit Arm - Adjustable Offset Upper Davit Masts

	
33 in.-43 in. (83.8 cm-109.2 cm)	36.5 in.-54.5 in. (92.7 cm-138.4 cm)
11.5 in.-27.5 in. (29.2 cm-69.9 cm)	23.5 in.-42.5 in. (59.7 cm-108 cm)

8518001

Weight:
27.1 lbs. (12.3 kg)

8518006

Weight:
31.1 lbs. (14.1 kg)

(Includes winch mount bracket)
Combine these adjustable offset upper davit masts with up to two lower mast extensions to increase the davit height. Consult the compatibility charts.

Lower Davit Mast Extensions

			
21 in. (53.3 cm)	33 in. (83.8 cm)	45 in. (114.3 cm)	57 in. (144.8 cm)

8518509

Weight:
14.15 lbs. (6.4 kg)

8518002

Weight:
17.6 lbs. (8 kg)

8518003

Weight:
19.75 lbs. (9 kg)






8518004

Weight:
24.15 lbs. (11 kg)


NOTE: Please reference compatibility chart on pages 24-25 for approved configurations, or visit go.3M.com/ConfinedSpaceCompatibilityChart for an updated list.

Configurable Davit Systems (Cont.)


Bases - Permanent

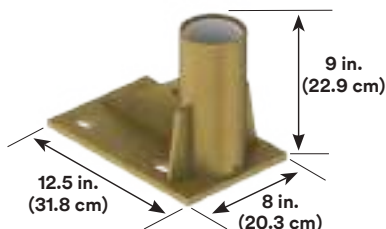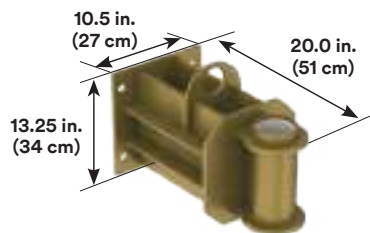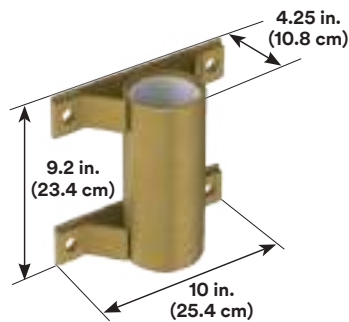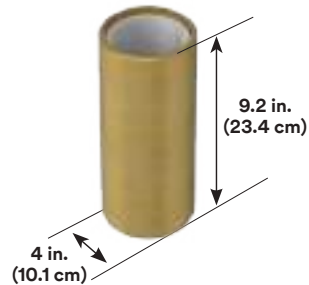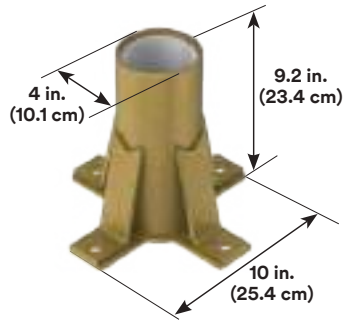

Model # 8516190	Floor Mount Sleeve Zinc-plated mild steel construction. Mounts to horizontal concrete or steel structure. Comes with PVC sleeve liner. Weight: 13 lbs. (5.9 kg)
8518347	Floor Mount Sleeve 304 Stainless Steel Weight: 13 lbs. (5.9 kg)
8518503	Floor Mount Sleeve Galvanized steel construction. Weight: 13 lbs. (5.9 kg)
Model # 8510109	Core Mount Sleeve Zinc-plated mild steel construction. Designed for slip-in installation into 4" (10.2 cm) core hole in concrete or in an existing steel structure. Comes with PVC sleeve liner. Weight: 8 lbs. (3.6 kg)
8510110	Core Mount Sleeve Stainless Steel Weight: 8 lbs. (3.6 kg)
Model # 8516191	Wall Mount Sleeve Mild steel zinc-plated compact design construction. Compact design creates minimum intrusion into work space. Mounts to vertical concrete or steel structures. Comes with PVC sleeve liner. Weight: 12 lbs. (5.4 kg)
8518348	Wall Mount Sleeve 304 Stainless Steel construction. Weight: 12 lbs. (5.4 kg)
8518504	Wall Mount Sleeve Galvanized steel construction. Weight: 12 lbs. (5.4 kg)
Model # 8530305	Offset Wall Mount Sleeve 14" (35.6 cm) offset wall mount sleeve, zinc plated steel construction, mounts to vertical surfaces. Weight: 93 lbs. (42 kg)
Model # 8510057	Offset Floor Mount Sleeve Mild steel zinc-plated construction. Offset sleeve design enables the davit to be placed closer to the work location. Weight: 25 lbs. (11.3 kg)

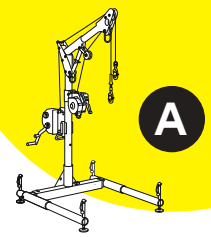

Bases - Permanent (Cont.)

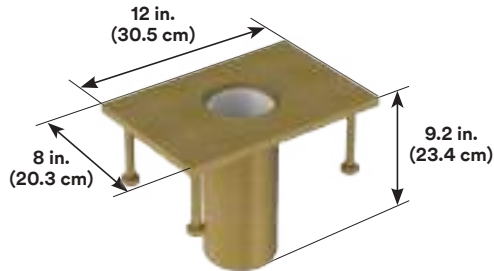

Model #
8510311

Flush Floor Mount Sleeve

Mild steel zinc-plated construction. Comes with pins for fresh concrete and cast-in-place concrete anchors for new construction or renovation. Flush mount design allows passage of traffic and eliminates trip hazards when not in use. Comes with PVC sleeve liner.


Weight: 21 lbs. (9.5 kg)

8512828

Flush Floor Mount Sleeve

Stainless steel construction. Comes with pins for fresh concrete installation.

Weight: 21 lbs. (9.5 kg)

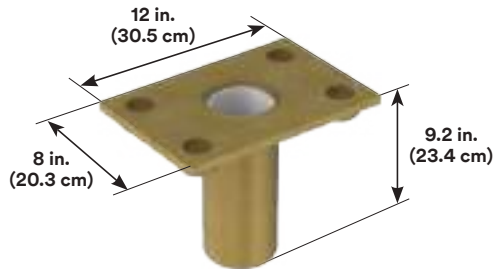

Model #
8510316

Flush Floor Mount Sleeve

Mild steel zinc-plated construction. Recessed fastener pockets allow for bolt-in installation into existing concrete or steel structure. Flush mount design allows passage of traffic and eliminates trip hazards when not in use. Comes with PVC sleeve liner.


Weight: 21 lbs. (9.5 kg)

8512827

Flush Floor Mount Sleeve

Stainless steel construction for existing concrete installation.

Weight: 21 lbs. (9.5 kg)

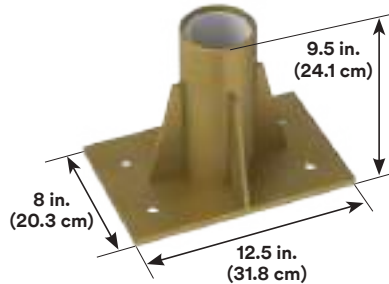

Model #
8512831

Center Mount Sleeve

Mild steel zinc-plated construction. Mounts to flat surfaces. Comes with PVC sleeve liner.

Weight: 13 lbs. (5.9 kg)

8516563

Center Mount Sleeve

Stainless Steel

Weight: 13 lbs. (5.9 kg)



Model #
8515162

Deck Mount Sleeve

Mild steel zinc-plated construction. Designed to slip into a 4" (10.2 cm) hole in existing flooring. Flush mount design allows passage of traffic and eliminates trip hazards when not in use. Comes with all necessary hardware. Mounts to thicknesses from 1/4" to 2" (6.4 mm–50.8 mm) max.

Weight: 17 lbs. (7.7 kg)

8515834

Deck Mount Sleeve


Stainless steel. Includes plastic stopper & mounting hardware.

Weight: 17 lbs. (7.7 kg)

NOTE: Please reference compatibility chart on pages 24–25 for approved configurations, or visit go.3M.com/ConfinedSpaceCompatibilityChart for an updated list.

Configurable Davit Systems (Cont.)

Bases - Freestanding & Counterweighted

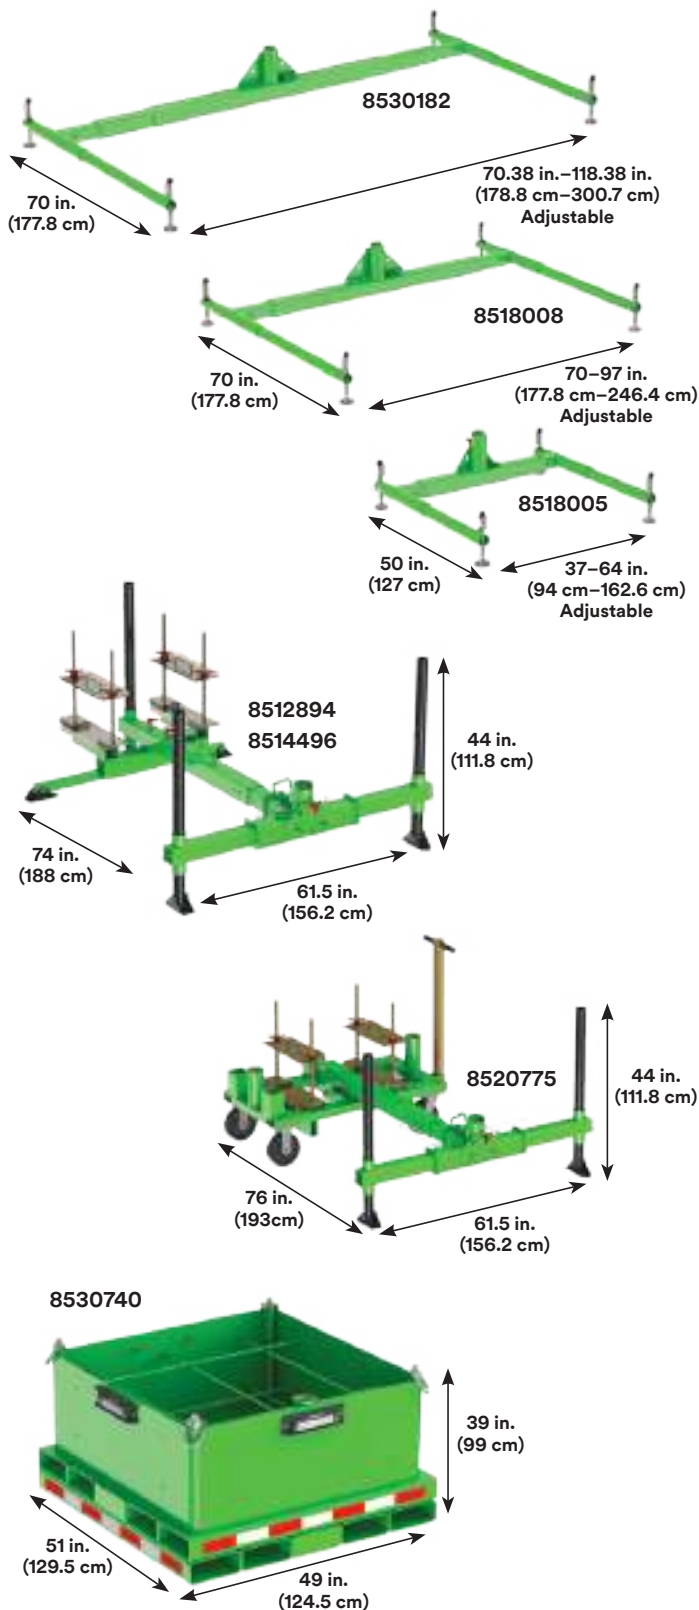

Model #
8530182

Extra Wide Expandable Base

Extra wide 3-piece expandable base for use with either 42.5" (108 cm) or 27.5" (69.9 cm) maximum offset davit masts.

Weight: 80.2 lbs. (36.4 kg)

8518008

Expandable Base

3-piece expandable base for use with either 42.5" (108 cm) or 27.5" (69.9 cm) maximum offset davit masts.

Weight: 92 lbs. (41.7 kg)

8518005

Expandable Base

3-piece expandable base for use with 27.5" (69.9 cm) maximum offset davit masts only.

Weight: 60 lbs. (27.2 kg)

Model #
8512894

Portable Counterweighted Rack Davit Base with Pole Leg Adjustment

Counterweighted rack davit base designed to be disassembled and easily transported.
Note: Steel counterweight plates, winch and davit not included.

Weight: 199 lbs. (90.3 kg)

8514496

Portable Counterweighted Rack Davit Base with Screw Leg Adjustment

Counterweighted rack davit base designed to be disassembled and easily transported.
Note: Steel counterweight plates not included.

Weight: 192 lbs. (87.1 kg)

8520775

Portable Counterweighted Cart Davit Base with Pole Leg Adjustment

Counterweighted cart davit base designed to be easily transported using integrated urethane casters.

Note: Steel counterweight plates not included.


Weight: 356 lbs. (161.5 kg)

Model #
8530740

Portable Counterweighted Concrete Filled Davit Base

Counterweighted davit base designed to be easily transported using a forklift
Note: 4,000 PSI concrete not included.

Weight: 1,252 lbs. (567.9 kg)

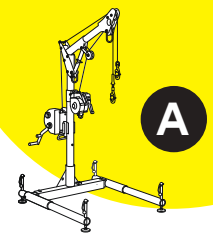

Bases - Integrated

Adjustable Catwalk Clamp

STEP 1: Select a clamp

Model # 8530078	Aluminum constructed clamp assembly with a clamp range (A) of 1/2"–32" (1.3 cm–81.3 cm). Compatible with long and short reach davit arms. Note: (A) on diagram below. Weight: 37 lbs. (16.8 kg)
8540774	Aluminum constructed clamp assembly with a clamp range (A) of 9.5"–21.5" (24.1 cm–54.6 cm). Compatible with short reach davit arms. Note: (A) on diagram below. Weight: 28 lbs. (12.7 kg)


STEP 2: Select outriggers

8514418	Outrigger with screw adjustment for use with 8530078 clamp. Order quantity 2 to complete system.
8512900	Outrigger with screw adjustment for use with 85400774 clamp. Order quantity 2 to complete system.

NOTE: Shorter outriggers available for specific configurations. Refer to IFU for more detailed information.


STEP 3: Add center section

8513593	For Counterweight System. Center section with davit sleeve required for catwalk clamp system. Weight: 22 lbs. (10 kg)
----------------	---

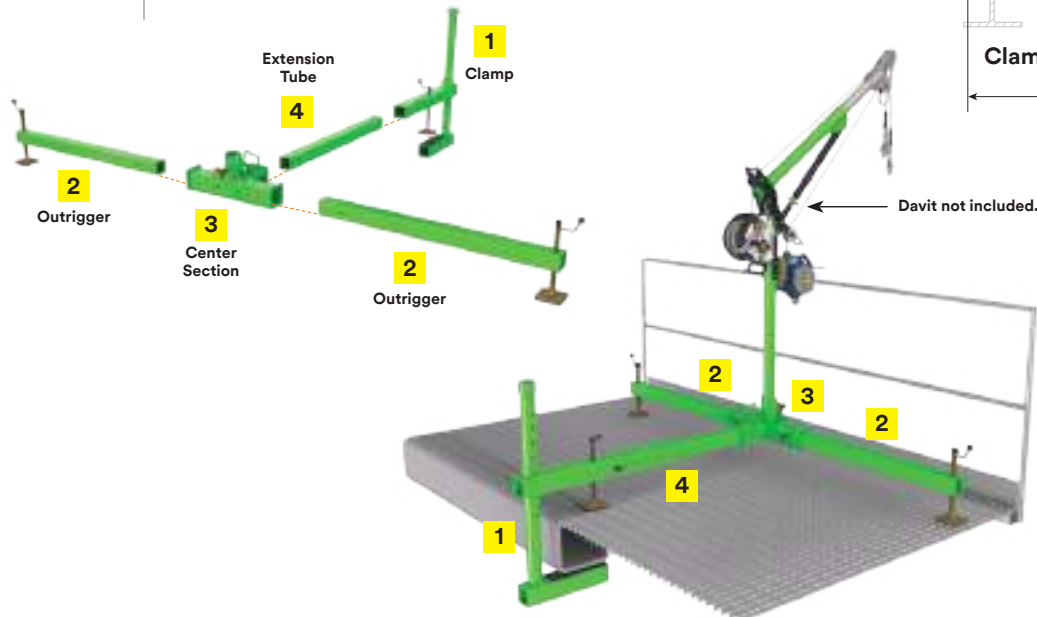

STEP 4: Select an extension tube

Aluminum Extension Tube	8540774 Clamp	8530078 Clamp	
	(B) Nominal Length	(B) Length Range	
8540773 3.5 lbs. (1.6 kg)	26.75" (67.9 cm)	N/A	N/A
8524573 4.7 lbs. (2.1 kg)	30.75" (78.1 cm)	51.31" (130.3 cm)	49.31" (125.2 cm)
8521280 7.1 lbs. (3.2 kg)	37.38" (94.9 cm)	57.94" (147.2 cm)	49.94" (126.8 cm)
8521281 10.7 lbs. (4.9 kg)	49.38" (125.4 cm)	69.88" (177.5 cm)	57.88" (147 cm)
8521282 14.2 lbs. (6.4 kg)	61.38" (155.9 cm)	81.98" (208.2 cm)	69.88" (177.5 cm)
8521283 17.8 lbs. (8.1 kg)	73.38" (186.4 cm)	93.88" (238.5 cm)	81.88" (208 cm)
8521284 21.4 lbs. (9.7 kg)	85.38" (216.9 cm)	105.88" (268.9 cm)	93.88" (238.5 cm)

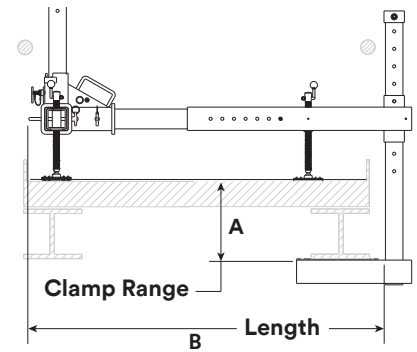


NOTE: Please reference compatibility chart on pages 24–25 for approved configurations, or visit go.3M.com/ConfinedSpaceCompatibilityChart for an updated list.

Configurable Davit Systems (Cont.)

Bases - Integrated (Cont.)

	8510323	Model # 8510323	Barrel Mount Sleeve Clamp on davit base with 3.5" (8.9 cm) maximum opening, 304 stainless steel. Weight: 36.5 lbs. (16.6 kg)
	8510429		Barrel Mount Sleeve Clamp on davit base with 3.5" (8.9 cm) maximum opening, zinc plated. Weight: 36.5 lbs. (16.6 kg)
	8530268		Barrel Mount Sleeve Clamp on davit base with 4.5" (11.4 cm) maximum opening, zinc plated. Weight: 35 lbs. (15.9 kg)
	8512285	Model # 8510715	Adjustable Barrel Mount Sleeve Clamp on davit base with 12" (30.5 cm) maximum opening. Weight: 52.6 lbs. (23.9 kg)
	8516005		Adjustable Barrel Mount Sleeve Clamp on davit base with 24" (61 cm) maximum opening. Weight: 68 lbs. (30.8 kg)
	8519377	Model # 8516005	Adjustable Strap Mount Designed to strap vertically to structures up to 60" (152.4 cm) in diameter. Weight: 36 lbs. (16.3 kg)
	8520267	Model # 8519377	Tank Flange Base Used on manways with a flange structure that the unit may be secured onto. This collar can clamp onto 6" (15.2 cm) max thick flange. Weight: 82 lbs. (37.2 kg)
	8520267	8520267	Tank Flange Base Fits flanges with a bolt circle diameter of 18" to 36" (45.7 cm to 91.4 cm) simple attachment with three bolts. Pivoting arms accommodate various manways. Can be used with 8525274 clamp-on studs, see tank pod section. Weight: 61 lbs. (27.7 kg)
	8510140	Model # 8510140	Vehicle Hitch Mount Sleeve Designed to install into a 2" (5.1 cm) hitch receiver on an attendant vehicle providing a highly portable davit base. Designed for 11.5"-27.5" (29.2 cm to 69.9 cm) offset davit. Weight: 57 lbs. (25.9 kg)
	8514461	8514461	Vehicle Hitch Mount Sleeve Designed for 23.5"-42.5" (59.7 cm to 108 cm) offset davit. Weight: 62 lbs. (28.1 kg)

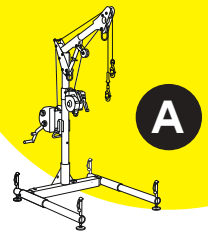

Bases - Integrated (Cont.)



Model # 8514503	Extension Tube 2' (61 cm) Sleeve Extension for Vehicle Hitch Mount. Weight: 17 lbs. (7.7 kg)
8512829	Extension Tube 4' (1.2 m) Sleeve Extension for Vehicle Hitch Mount. Weight: 27.8 lbs. (12.6 kg)
8511384	Extension Tube 6' (1.8 m) Sleeve Extension for Vehicle Hitch Mount. Weight: 39 lbs. (17.7 kg)
Model # 8511401	Universal Joint Assembly The universal joint assembly installs between the 8510140 hitch mount sleeve or extension allowing the base to be pivoted about the vehicle hitch. Please refer to user instructions to ensure compliance with any usage limitations. Weight: 10 lbs. (4.5 kg)
8520886	Universal Hitch Ball Coupler The universal hitch ball coupler is used to connect the vehicle hitch mounted sleeve to 1-7/8", 2", and 2-5/16" hitch balls. Weight: 16 lbs. (7.3 kg)
Model # 8511892	Portable Rail Clamping Base Ideal for rail accessed areas, including over the edge of a rail bridge. System comes complete with a rail bridge clamp which anchors the base, 36" (91.4 cm) inner extension tube, center section, and two outrigger screw assemblies. Weight: 92 lbs. (41.7 kg)
Model # 8510501	Manhole Collar Designed for applications involving frequent setups over similarly sized access openings. Lightweight, powder-coated aluminum construction for portability.
8510520	19.5" (49.5 cm) Manhole collar for use on manways 20"–22" (50.8 cm–55.9 cm) in diameter.
8510457	21.5" (54.6 cm) Manhole collar for use on manways 22"–24" (55.9 cm–61 cm) in diameter.
8510163	23.5" (59.7 cm) Manhole collar for use on manways 24"–26" (61 cm–66 cm) in diameter.
8510633	25.5" (64.8 cm) Manhole collar for use on manways 26"–28" (66 cm–71.1 cm) in diameter.
8510632	27.5" (69.9 cm) Manhole collar for use on manways 28"–30" (71.1 cm–76.2 cm) in diameter.
8510546	29.5" (74.9 cm) Manhole collar for use on manways 30"–32" (76.2 cm–81.3 cm) in diameter.
8530312	31.5" (80 cm) Manhole collar for use on manways 32"–34" (81.3 cm–86.4 cm) in diameter.
8512994	33.5" (85 cm) Manhole collar for use on manways 34"–36" (86.4 cm–91.4 cm) in diameter.

NOTE: Please reference compatibility chart on pages 24–25 for approved configurations, or visit go.3M.com/ConfinedSpaceCompatibilityChart for an updated list.

Configurable Davit Systems (Cont.)

Bases - Integrated (Cont.)



Model #
8510568

Forklift Basket

Designed to convert your forklift into a versatile confined space and fall arrest work platform. Integrated davit sleeve will accommodate short reach davits up to 27.5" (69.9 cm) reach. Lightweight aluminum construction and tool-free assembly simplifies setup, transport and storage. Powder-coated finish with anti-slip finish on walking surfaces. Includes spring-loaded gate.

Weight: 215 lbs. (97.5 kg)

8521230

Forklift Basket

Forklift basket platform with two integrated anchorages provides a safe means of access to elevated surfaces. Integrated fork pockets and chain fastening system hold this work platform securely to the forklift. Constructed of durable powder coated steel.

Weight: 443 lbs. (200.9 kg)

Accessories

Model #
8518270

Equipment cart for 5-piece davit systems 8518000 & 8518040.

8549915

Davit arm winch/SRL mounting bracket assembly. Extra bracket required when adding additional winch or retrieval SRL to a davit system.

8510207

Winch/SRL adapter with flat back.

8516824

Quick release mounting bracket for upper and lower masts.

8510826

Heavy-Duty Sleeve Cap, mild steel zinc-plated construction.

8510827

Heavy-Duty Sleeve Cap, stainless steel construction.

8518513

Set of 2 carrying bags for 5-piece hoist. Used for transporting the 8518000 short reach 5-piece davit system.

8513330


Carrying bag with protective plastic liner. Used for transporting one piece adjustable offset davit masts.

NOTE: Please reference compatibility chart on pages 24–25 for approved configurations, or visit go.3M.com/ConfinedSpaceCompatibilityChart for an updated list.

3M™ DBI-SALA®

Tripod Systems

The 3M™ DBI-SALA® Confined Space Tripod is constructed of tubular lightweight aluminum and a rugged steel head assembly. These tripods are extremely lightweight and portable, easily set up by one worker and can be transported from one location to another. Designed for confined space entry and emergency rescue applications, they can accommodate a variety of winches and fall arrest devices. 3M tripods are also loaded with features such as spring-loaded locking legs, simple detent pin style adjustment, quick-mount mechanical device brackets, safety chains to prevent movement, and safety shoes that incorporate a rubber sole for flat surfaces and spiked edges for slippery surfaces.

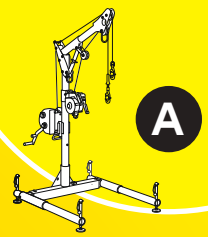

1 Integrated Re-Directional Pulleys

Integrated pulleys are top mounted for smooth operation.

2 Spring-Loaded Tripod Legs

Spring-loaded leg assemblies snap securely into position when fully deployed, eliminating the need for pins.

3 5,000 lb. (22 kN) Rated Anchor Points

Two integrated 5,000 lb. (22 kN) anchor points provide many versatile and robust anchoring options.

4 Safety & Inspection Manager Capable

Equipped with a RFID tag to streamline your safety and asset management.

5 Accessories

A multitude of accessories provides the options and versatility needed to tackle unique confined space challenges.

6 Connecting Devices

Can support up to four connecting devices (winches/SRLs) for complete flexibility

7 Anodized Aluminum Construction

Lightweight yet durable construction for ease of use and longevity.

8 Telescopic Legs

Provide integrated means of leveling and adjustment. Legs are securely locked with steel detent pins.

9 Safety Chains

Provides added support and strength for demanding confined space applications.

10 Foot Pads

Pivoting footpads have built in sharp points for digging into soft and/or uneven terrain.



Tripods



Tripod



Salalift™ II Winch



Sealed-Blok™
Retrieval SRL



Ultra-Lok™
Retrieval SRL



Tripod
Carrying Bag




Winch/SRL
Mounting Bracket



Leg Mount Pulley

Complete Tripod Solutions

SKU	7' Alum. Tripod	9' Alum. Tripod	Lifeline Type	Salalift™ II Winch	Sealed-Blok™ Retrieval SRL	Ultra-Lok™ Retrieval SRL	Tripod Carrying Bag	Winch/SRL Mounting Bracket	Leg Mount Pulley
	8000000	8000010						8005048	8003238
8300030	■		Galvanized	60 ft. (18.3 m)					
8300032	■		Galvanized	90 ft. (27.4 m)					
8300034	■		Galvanized	120 ft. (36.6 m)					
8301030	■		Galvanized		50 ft. (15.2 m)				
8301041	■		Galvanized	60 ft. (18.3 m)	50 ft. (15.2 m)			■	■
8301062	■		Galvanized			50 ft. (15.2 m)	■		
8301066	■		Galvanized	60 ft. (18.3 m)		50 ft. (15.2 m)	■	■	■
8300040		■	Galvanized	60 ft. (18.3 m)					
8301035		■	Galvanized		50 ft. (15.2 m)				
8301049		■	Galvanized		85 ft. (25.9 m)				
8301043		■	Galvanized	60 ft. (18.3 m)	50 ft. (15.2 m)			■	■
8301064		■	Galvanized			50 ft. (15.2 m)	■		
8301068		■	Galvanized	60 ft. (18.3 m)		50 ft. (15.2 m)	■	■	■
8300031	■		Stainless Steel	60 ft. (18.3 m)					
8300033	■		Stainless Steel	90 ft. (27.4 m)					
8300035	■		Stainless Steel	120 ft. (36.6 m)					
8301031	■		Stainless Steel		50 ft. (15.2 m)				
8301042	■		Stainless Steel	60 ft. (18.3 m)	50 ft. (15.2 m)			■	■
8301063	■		Stainless Steel			50 ft. (15.2 m)	■		
8301067	■		Stainless Steel	60 ft. (18.3 m)		50 ft. (15.2 m)	■	■	■
8300041		■	Stainless Steel	60 ft. (18.3 m)					
8301036		■	Stainless Steel		50 ft. (15.2 m)				
8301037		■	Stainless Steel		85 ft. (25.9 m)				
8301044		■	Stainless Steel	60 ft. (18.3 m)	50 ft. (15.2 m)			■	■
8301065		■	Stainless Steel			50 ft. (15.2 m)	■		
8301069		■	Stainless Steel	60 ft. (18.3 m)		50 ft. (15.2 m)	■	■	■

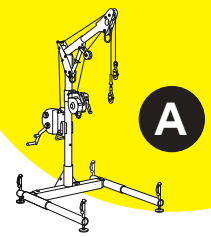

Configurable Tripod Solutions

3M™ DBI-SALA® Confined Space Aluminum Tripods feature telescoping adjustable locking legs, a built-in pulley system, rubber safety shoes with spiked edges and a safety leg support chain. The integrated 5,000 lb. (22 kN) eyebolt anchor points and quick connect winch/SRL mount bracket make for straightforward connection points. 350 lb. (159.0kg) working load capacity.



Model # 8000000	3M™ DBI-SALA® Aluminum Tripod 7' (2.1 m) aluminum tripod with adjustable locking legs, safety chains, top pulley and winch bracket.
8000010	3M™ DBI-SALA® Aluminum Tripod 9' (2.7 m) aluminum tripod with adjustable locking legs, safety chains, top pulley and winch bracket.
8003238	Leg Mount Pulley Attaches to tripod leg for routing of winch or SRL cable.
8005048	Tripod Mounting Base Attaches to tripod leg, mates with 8100070 winch base.
8003205	Tripod Pulley Attaches to tripod eye bolt for routing of winch or SRL cable.
9503094	Carrying bag for 7' (2.1 m) tripod with protective plastic liner.
9503095	Carrying bag for 9' (2.7 m) tripod with protective plastic liner.


3M™ DBI-SALA® UCT Aluminum Tripods are constructed of lightweight aluminum, and feature adjustable height models up to 10 ft. (3 m). This tripod can be equipped with up to three pulleys to accommodate a variety of winches and fall arrest devices. Integrated 5,000 lb. (22 kN) anchor points readily accept standard carabiners and are ideal for attaching secondary backup systems. 450 lb. (204.1 kg) working load capacity.



Model # 8513158	3M™ DBI-SALA® UCT Aluminum Tripod 7' (2.1 m) aluminum tripod with adjustable locking legs, safety chains, top pulley and winch bracket.
8513159	3M™ DBI-SALA® UCT Aluminum Tripod 10' (3 m) aluminum tripod with adjustable locking legs, safety chains, top pulley and winch bracket.
8512293	Top Pulley Assembly for UCT Series Tripods Pulleys are mounted on top of the head assembly for routing mechanical device's lifeline.
8510224	Winch/SRL Mounting Bracket Attaches to tripod (8513158) with quick-release pins for tool-free setup and adjustment.
8512292	Winch/SRL Mounting Bracket Attaches to tripod (8513159) with quick-release pins for tool-free setup and adjustment.
8513329	Carrying bag for 7' (2.1 m) tripod with protective plastic liner.
8513330	Carrying bag for 10' (3 m) tripod with protective plastic liner.

3M DBI-SALA Confined Space Portable Fall Arrest Post

Portable Fall Arrest Posts

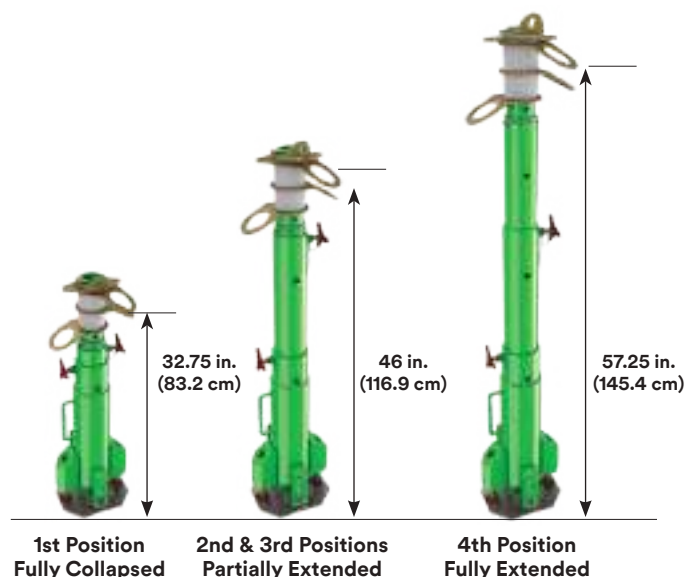

Our portable fall arrest post allows for up to three workers on top of transformers or other types of vertical platforms with potential fall hazards. The system features a telescopic design and 3 swiveling anchor points providing up to 3 workers with 360 degrees of protection and mobility. Connect up to two Portable Fall Arrest Posts (8516691) for use in Horizontal Lifeline Applications. See user instructions for specific installation requirements.


Model # 8516691	Portable Fall Arrest System The system has 3 telescopic working heights ranging from 30.5" (127.8 cm), 43" (109.3 cm), all the way up to 54.5" (138.5 cm).
8516996	14' (4.3 m) Uni-Anchor Fall Arrest Post The 14' (4.3 m) uni-anchor fall arrest post mounts using uni-anchor plates and extends up to 14' (4.3 m) to provide a 1-man-rated fall arrest anchor point. Weight: 71 lbs. (32.2 kg)

8516691 and 8516696 are compatible with all bases listed below.


8516996




Portable Fall Arrest Post - Bases

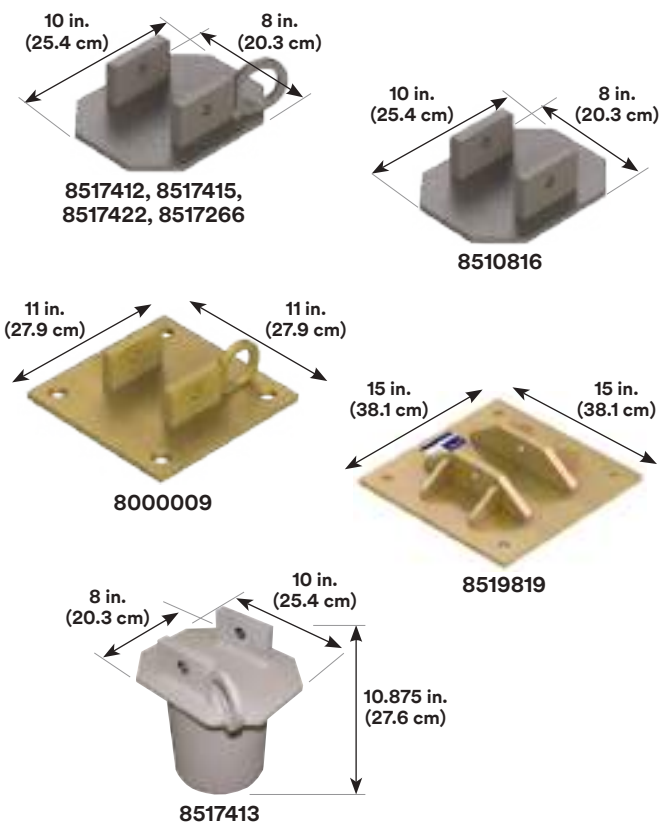

Model # 8517412	Bare Steel Uni-Anchor with Tie-Off Anchor For use in closed environments without chemical or moisture exposure. Weight: 11.6 lbs. (5.3 kg)
8517415	Stainless Steel Uni-Anchor with Tie-Off Anchor Weight: 11.6 lbs. (5.3 kg)
8517422	Sandblasted Uni-Anchor with Tie-Off Anchor Weight: 11.6 lbs. (5.3 kg)
8517266	Primer Finish Uni-Anchor with Tie-Off Anchor Weight: 12 lbs. (5.4 kg)
Model # 8510816	Weld-on Mounting Plate Unplated mild steel construction. Weight: 11.6 lbs. (5.3 kg)
Model # 8000009	Bolt-On Uni-Anchor with Tie-Off Zinc Plated Zinc plated uni-anchor with tie-off, bolt-on. Weight: 21 lbs. (9.5 kg)
8519819	Bolt-On Uni-Anchor with Tie-Off Zinc Plated Larger footprint for use on concrete surfaces.
Model # 8517413	Bare Steel Weld-On Base with Tie-Off Anchor Can be modified for angled/sloped applications.

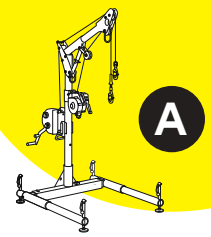

Portable Fall Arrest Post Accessories

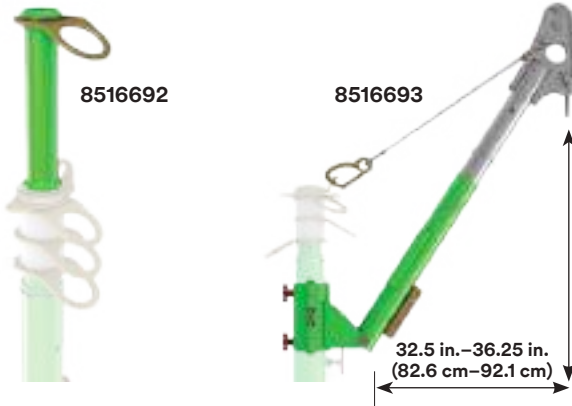

Model # 8516692	14" (35.6 cm) Anchor Post Extension Allows for tie-off of one worker at an increased height of 68.5" (174 cm) Weight: 5 lbs. (2.3 kg)
8516693	Portable Fall Arrest Post Rescue Davit Arm Weight: 20.5 lbs. (9.3 kg)
8517565	Heavy-Duty Carrying Bag For 8516691 portable fall arrest post only.

Tank Pod System


Tank Pod System



Model # 8513700	Tank Pod Ideal for situations with low overhead clearance, or when the surrounding area is not suitable for a davit or tripod system. Secures to tank entry flanges via clamp-on studs (8525274), or directly to 5/8"-11 UNC studs. Adapters are optionally available to adapt this system to either 1/2" or 3/4" studs.
8515299	Stud Extension Adapter 1/2"-5/8" (6.4 mm-15.9 mm) UNC stud adapter.
8515301	Stud Extension Adapter 3/4"-5/8" (19.1 mm-15.9 mm) UNC stud adapter.
8525274	Stainless Steel Clamp-On Studs Clamps to tank flanges to provide a secure base for mounting.


Side Entry System

Side Entry System

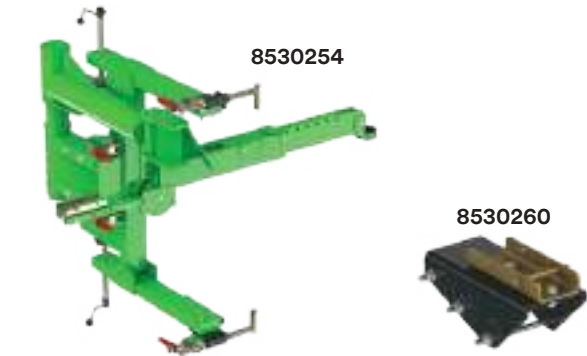


Model # 8530254	Side Entry System Designed for single user confined space entry/ retrieval and rescue operations involving horizontal entries with vertical positioning or retrieval required inside the space. Fits 22"–56" (55.9 cm– 142.2 cm) diameter manways with a flange thickness ranging from 1"–6" (2.5 cm–15.2 cm). Weight: 148 lbs. (67.1 kg)
8530260	Secondary Winch/SRL Mounting Bracket Weight: 5 lbs. (2.3 kg)

Side Entry System - Floor Mounted

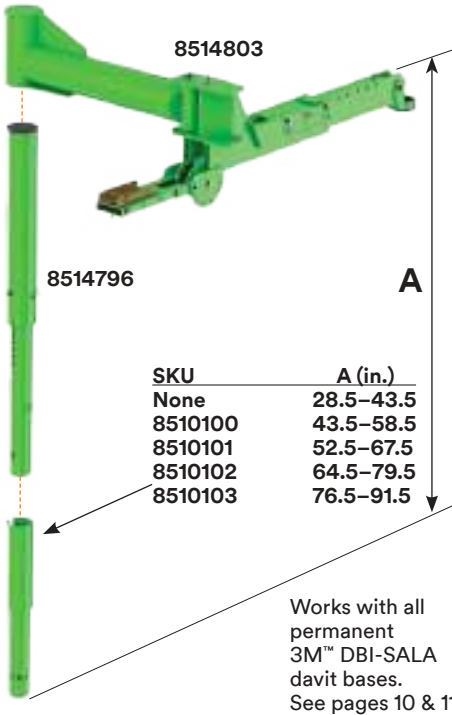

SKU	A (in.)
None	28.5–43.5
8510100	43.5–58.5
8510101	52.5–67.5
8510102	64.5–79.5
8510103	76.5–91.5

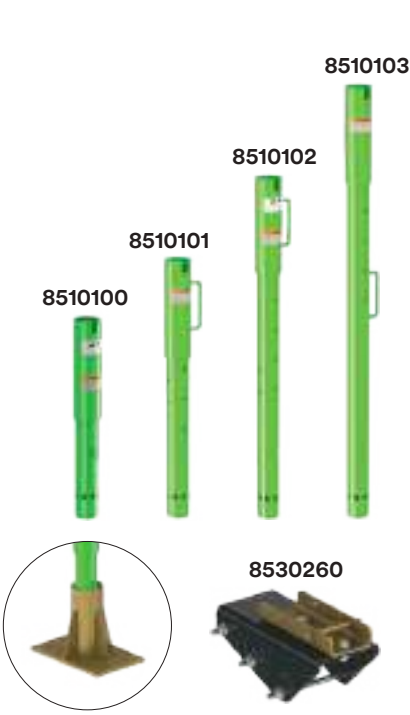


Model # 8514803	Arm Assembly, Side Entry System Weight: 57.6 lbs. (26.1 kg)
8514796	Support Post 28.5"–43.5" (96.5 cm–135.9 cm) Weight: 32.6 lbs. (14.8 kg)
8510100	15" (38.1 cm) Mast Extension Weight: 16 lbs. (7.3 kg)
8510101	24" (61 cm) Mast Extension Weight: 19 lbs. (8.6 kg)
8510102	36" (91.4 cm) Mast Extension Weight: 23 lbs. (10.4 kg)
8510103	48" (121.9 cm) Mast Extension Weight: 27 lbs. (12.2 kg)
8530260	Secondary Winch/SRL Mounting Bracket Weight: 5 lbs. (2.3 kg)

Restricted Space Side Entry System



Model # 8000082	Restricted Space Side Entry System Fastens directly to man-way entries, enabling rescue and retrieval for up to two workers. Mounting hardware not included. Weight: 45 lbs. (20.4 kg)
--------------------	--

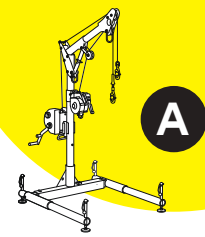

Pole Hoist System

The pole hoist attaches with a carabiner on the universal bracket to a suitable anchor point, allowing you to work in any direction from any angle. It has a unique swivel head that rotates 360 degrees, providing flexibility in both vertical and horizontal confined space entries.



Complete Pole Hoist Systems

SKU	Pole Hoist	Digital Series Winch	Ultra-Lok™ Retrieval SRL	Digital Winch Bag
	8530252	8518560	3501102	8517567
8301114	■	■		■
8301115	■		■	

Model # 8530252	Extendable Pole Hoist, 4'–7' (1.2 m–2.1 m) Extension with swivel head and winch mounting bracket, T-bar leg assembly and hardware/fasteners. Weight: 12 lbs. (5.4 kg)
8530253	Extendable Pole Hoist, 6'–10' (1.8 m–3 m) Extension with swivel head and winch mounting bracket, T-bar leg assembly and hardware/fasteners. Weight: 14 lbs. (6.4 kg)


Pole Hoist Anchors & Accessories



Model # 3620008	Web Sling 6,000 lb. rated, 1' (30.5 cm) long; 3/4" (19.1 mm) wide Kevlar® web anchor sling.
2104550	Steel Anchor Plate with D-Ring This plate anchor offers a compact, reliable attachment to 3/8"–1" (9.5 mm–25.4 mm) thick plate steel for connecting your lanyard, vertical lifeline system or self-retracting lifeline.
8520777	Clamp-On Anchor for Pole Hoists Designed to secure to a vertical or horizontal flange up to 6" (15.2 cm) thick and provide an anchorage point to connect a pole hoist device to.
8513329	Carrying Bag for 4'–7' (1.2 m–2.1 m) pole hoist.
8513330	Carrying Bag for 6'–10' (1.8 m–3 m) pole hoist.

3M™ DBI-SALA® Confined Space Solutions | Anchors Compatibility Chart

Davit Arms								
Bases	8518001	8518006	8518382	8518383	8518384	8518385	8518386	8518387
8510057	■	■	■	■	■	■	■	■
Mast Extension Rules	2 masts, 90" (228.6 cm) total max	2 masts, 78" (198.1 cm) total max	Not allowed	Not allowed	Not allowed	Not allowed	Not allowed	Not allowed
8510109	■	■	■	■	■	■	■	■
Mast Extension Rules	2 masts, 90" (228.6 cm) total max	2 masts, 78" (198.1 cm) total max	Not allowed	Not allowed	Not allowed	Not allowed	Not allowed	Not allowed
8510110	■	■	■	■	■	■	■	■
Mast Extension Rules	2 masts, 90" (228.6 cm) total max	2 masts, 78" (198.1 cm) total max	Not allowed	Not allowed	Not allowed	Not allowed	Not allowed	Not allowed
8510140	■							
Mast Extension Rules	21" (53.3 cm) only							
Notes:	The 8511401 accessory can only be used with short reach davit.							
8510163	■		■	■	■			
Mast Extension Rules	2 masts, 90" (228.6 cm) total max		Not allowed	Not allowed	Not allowed			
8510311	■	■	■	■	■	■	■	■
Mast Extension Rules	2 masts, 90" (228.6 cm) total max	2 masts, 78" (198.1 cm) total max	Not allowed	Not allowed	Not allowed	Not allowed	Not allowed	Not allowed
8510316	■	■	■	■	■	■	■	■
Mast Extension Rules	2 masts, 90" (228.6 cm) total max	2 masts, 78" (198.1 cm) total max	Not allowed	Not allowed	Not allowed	Not allowed	Not allowed	Not allowed
8510323	■	■	■	■	■	■	■	■
Mast Extension Rules	2 masts, 90" (228.6 cm) total max	2 masts, 78" (198.1 cm) total max	Not allowed	Not allowed	Not allowed	Not allowed	Not allowed	Not allowed
8510429	■	■	■	■	■	■	■	■
Mast Extension Rules	2 masts, 90" (228.6 cm) total max	2 masts, 78" (198.1 cm) total max	Not allowed	Not allowed	Not allowed	Not allowed	Not allowed	Not allowed
8510457	■		■	■	■			
Mast Extension Rules	2 masts, 90" (228.6 cm) total max		Not allowed	Not allowed	Not allowed			
8510501	■		■	■	■			
Mast Extension Rules	2 masts, 90" (228.6 cm) total max		Not allowed	Not allowed	Not allowed			
8510520	■		■	■	■			
Mast Extension Rules	2 masts, 90" (228.6 cm) total max		Not allowed	Not allowed	Not allowed			
8510546	■		■	■	■			
Mast Extension Rules	2 masts, 90" (228.6 cm) total max		Not allowed	Not allowed	Not allowed			
8510568	■		■	■				
Mast Extension Rules	1 mast, up to 45" (114.3 cm) mast max		Not allowed	Not allowed				
8510633	■		■	■	■			
Mast Extension Rules	2 masts, 90" (228.6 cm) total max		Not allowed	Not allowed	Not allowed			
8510715	■		■	■	■			
Mast Extension Rules	2 masts, 90" (228.6 cm) total max		Not allowed	Not allowed	Not allowed			
8511892	■		■	■	■			
Mast Extension Rules	2 masts, 90" (228.6 cm) total max		Not allowed	Not allowed	Not allowed			
8512285	■		■	■	■			
Mast Extension Rules	2 masts, 90" (228.6 cm) total max		Not allowed	Not allowed	Not allowed			
8512827	■	■	■	■	■	■	■	■
Mast Extension Rules	2 masts, 90" (228.6 cm) total max	2 masts, 78" (198.1 cm) total max	Not allowed	Not allowed	Not allowed	Not allowed	Not allowed	Not allowed
8512828	■	■	■	■	■	■	■	■
Mast Extension Rules	2 masts, 90" (228.6 cm) total max	2 masts, 78" (198.1 cm) total max	Not allowed	Not allowed	Not allowed	Not allowed	Not allowed	Not allowed
8512831	■	■	■	■	■	■	■	■
Mast Extension Rules	2 masts, 90" (228.6 cm) total max	2 masts, 78" (198.1 cm) total max	Not allowed	Not allowed	Not allowed	Not allowed	Not allowed	Not allowed
8512894	■	■ ¹	■	■	■	■ ¹	■ ¹	■ ¹
Mast Extension Rules	2 masts, 90" (228.6 cm) total max	2 masts, 78" (198.1 cm) total max	Not allowed	Not allowed	Not allowed	Not allowed	Not allowed	Not allowed
Notes:	¹ Quantity two alternate leg assemblies (8520887 or 8514418) must be ordered for use with davit reaches exceeding 27.5" (69.9 cm).							
8512994	■		■	■	■			
Mast Extension Rules	2 masts, 90" (228.6 cm) total max		Not allowed	Not allowed	Not allowed			
8514461	■	■						
Mast Extension Rules	21" (53.3 cm) only	21" (53.3 cm) only						
Notes:	The 8511401 accessory can only be used with short reach davit.							
8514496	■	■ ²	■	■	■	■ ²	■ ²	■ ²
Mast Extension Rules	2 masts, 90" (228.6 cm) total max	2 masts, 78" (198.1 cm) total max	Not allowed	Not allowed	Not allowed	Not allowed	Not allowed	Not allowed
Notes:	² Quantity two alternate leg assemblies (8520887 or 8514418) must be ordered for use with davit reaches exceeding 27.5" (69.9 cm).							

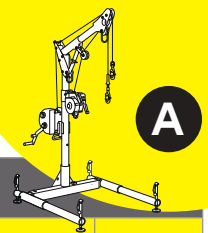

Davit Arms


Bases	8518001	8518006	8518382	8518383	8518384	8518385	8518386	8518387
8515162	■	■	■	■	■	■	■	■
Mast Extension Rules	2 masts, 90" (228.6 cm) total max	2 masts, 78" (198.1 cm) total max	Not allowed	Not allowed	Not allowed	Not allowed	Not allowed	Not allowed
8515834	■	■	■	■	■	■	■	■
Mast Extension Rules	2 masts, 90" (228.6 cm) total max	2 masts, 78" (198.1 cm) total max	Not allowed	Not allowed	Not allowed	Not allowed	Not allowed	Not allowed
8516005	■		■	■	■			
Mast Extension Rules	2 masts, 90" (228.6 cm) total max		Not allowed	Not allowed	Not allowed			
8516190	■	■	■	■	■	■	■	■
Mast Extension Rules	2 masts, 90" (228.6 cm) total max	2 masts, 78" (198.1 cm) total max	Not allowed	Not allowed	Not allowed	Not allowed	Not allowed	Not allowed
8516191	■	■	■	■	■	■	■	■
Mast Extension Rules	2 masts, 90" (228.6 cm) total max	2 masts, 78" (198.1 cm) total max	Not allowed	Not allowed	Not allowed	Not allowed	Not allowed	Not allowed
8516563	■	■	■	■	■	■	■	■
Mast Extension Rules	2 masts, 90" (228.6 cm) total max	2 masts, 78" (198.1 cm) total max	Not allowed	Not allowed	Not allowed	Not allowed	Not allowed	Not allowed
8518000	■							
Mast Extension Rules	21" or 33" (53.3 cm or 83.8 cm) only							
8518005	■							
Mast Extension Rules	21" or 33" (53.3 cm or 83.8 cm) only							
8518008	■	■						
Mast Extension Rules	21" or 33" (53.3 cm or 83.8 cm) only	21" or 33" (53.3 cm or 83.8 cm) only						
8518040	■	■						
Mast Extension Rules	21" or 33" (53.3 cm or 83.8 cm) only	21" or 33" (53.3 cm or 83.8 cm) only						
8518347	■	■	■	■	■	■	■	■
Mast Extension Rules	2 masts, 90" (228.6 cm) total max	2 masts, 78" (198.1 cm) total max	Not allowed	Not allowed	Not allowed	Not allowed	Not allowed	Not allowed
8518348	■	■	■	■	■	■	■	■
Mast Extension Rules	2 masts, 90" (228.6 cm) total max	2 masts, 78" (198.1 cm) total max	Not allowed	Not allowed	Not allowed	Not allowed	Not allowed	Not allowed
8518503	■	■	■	■	■	■	■	■
Mast Extension Rules	2 masts, 90" (228.6 cm) total max	2 masts, 78" (198.1 cm) total max	Not allowed	Not allowed	Not allowed	Not allowed	Not allowed	Not allowed
8518504	■	■	■	■	■	■	■	■
Mast Extension Rules	2 masts, 90" (228.6 cm) total max	2 masts, 78" (198.1 cm) total max	Not allowed	Not allowed	Not allowed	Not allowed	Not allowed	Not allowed
8519377	■		■	■	■			
Mast Extension Rules	2 masts, 90" (228.6 cm) total max		Not allowed	Not allowed	Not allowed			
Notes:	24" (61 cm) maximum davit reach, mast head pin positions 1, 2 & 3. Mast head pin position 4 cannot be used.							
8520267	■		■	■	■			
Mast Extension Rules	2 masts, 90" (228.6 cm) total max		Not allowed	Not allowed	Not allowed			
Notes:	A maximum of 18" (45.7 cm) davit offset is allowed with this base.							
8520775	■	■ ³	■	■	■	■ ³	■ ³	■ ³
Mast Extension Rules	2 masts, 90" (228.6 cm) total max	2 masts, 78" (198.1 cm) total max	Not allowed	Not allowed	Not allowed	Not allowed	Not allowed	Not allowed
Notes:	³ Quantity two alternate leg assemblies (8520887 or 8514418) must be ordered for use with davit reaches exceeding 27.5" (69.9 cm).							
8530078	■	■	■	■	■	■	■	■
Mast Extension Rules	2 masts, 90" (228.6 cm) total max	2 masts, 78" (198.1 cm) total max	Not allowed	Not allowed	Not allowed	Not allowed	Not allowed	Not allowed
Notes:	Quantity two leg assemblies (8514418 or 8520887) must be ordered for use with this clamp.							
8530182	■	■						
Mast Extension Rules	21" or 33" (53.3 cm or 83.8 cm) only	21" or 33" (53.3 cm or 83.8 cm) only						
8530305	■	■	■	■	■	■	■	■
Mast Extension Rules	2 masts, 90" (228.6 cm) total max	2 masts, 78" (198.1 cm) total max	Not allowed	Not allowed	Not allowed	Not allowed	Not allowed	Not allowed
8530312	■		■	■	■			
Mast Extension Rules	2 masts, 90" (228.6 cm) total max		Not allowed	Not allowed	Not allowed			
8530352								
Notes:	This SKU comes complete with a specific davit arm. No other davits or mast extensions allowed.							
8530740	■	■	■	■	■	■	■	■
Mast Extension Rules	2 masts, 90" (228.6 cm) total max	2 masts, 78" (198.1 cm) total max	Not allowed	Not allowed	Not allowed	Not allowed	Not allowed	Not allowed
Notes:	This base is required to be filled with 4000 PSI concrete prior to use.							
8540774	■		■	■	■			
Mast Extension Rules	2 masts, 90" (228.6 cm) total max		Not allowed	Not allowed	Not allowed			
Notes:	Quantity two leg assemblies (8512900) must be ordered for use with this clamp.							

You need the right harness for your application.

Depending on your application, the harness you choose matters. Make sure you're rescue-ready with the correct harness.

- ▶ **If raising and lowering is the primary means of egress:**
3M™ DBI-SALA® ExoFit NEX™ with Back & Front D-Ring
- ▶ **If a ladder is the primary means of egress:**
3M™ DBI-SALA® ExoFit NEX™ with Back D-Ring
- ▶ **If raising and lowering into a restricted space and no ladder is present:**
3M™ DBI-SALA® ExoFit NEX™ with Back & Shoulder D-Rings
- ▶ **If work is being performed while suspended for a long period of time:**
3M™ DBI-SALA® ExoFit NEX™ with Back & Front D-Rings and Seat Sling

**3M™ DBI-SALA® ExoFit NEX™
Full-Body Harness Sizing Chart**

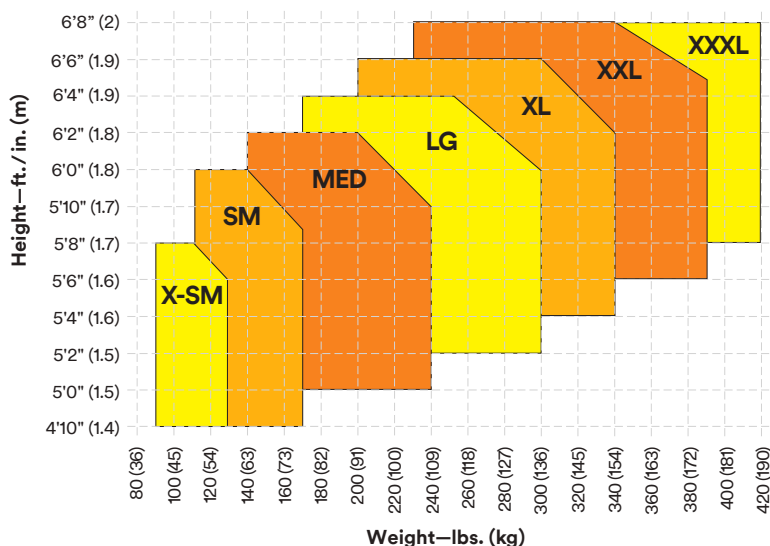

Harnesses



1113040



1113010

Model #
1113030
1113031
1113034
1113037
1113040
1113043

3M™ DBI-SALA® ExoFit NEX™ with Back & Front D-Ring,
XS
Small
Medium
Large
XL
XXL

1113000
1113001
1113004
1113007
1113010
1113013

3M™ DBI-SALA® ExoFit NEX™ with Back D-Ring, XS
Small
Medium
Large
XL
XXL

1113060
1113061
1113064
1113067
1113070
1113073

3M™ DBI-SALA® ExoFit NEX™ with Back & Shoulder D-Rings, XS
Small
Medium
Large
XL
XXL

1113356

**3M™ DBI-SALA® ExoFit NEX™ with Back & Front D-Rings
& Seat Sling, XS**

1113190
1113191
1113192
1113193
1113194

Small
Medium
Large
XL
XXL



1113070



1113193



Accessories

1001378



1001190



1001140



1001210



1231460



AK020A1



2108403



Model #
1001378

Suspended Workman's Chair
Polyester webbing, alloy steel connectors, weight capacity of up to 420 lbs. (190.5 kg).

1001190

Bosun Chair
12" x 24" x 1" (30.5 cm x 61 cm x 2.5 cm) board, cushion and side snaps.

1001140

Bosun Chair only
12" x 24" x 1" board (30.5 cm x 61 cm x 2.5 cm).

1001210

Retrieval Wristlets
Rescue/retrieval design is ideal for connection to victim's wrists for narrow extractions. Yoke wristlets attached to Y-lanyard with D-ring at end x 2' (61 cm).

1001220

Retrieval Wristlets
Attached with an D-ring at one end x 18" (45.7 cm).

1231460

Y-Lanyard
Rescue/retrieval design ideal for use with harness incorporating shoulder D-rings. Spreader bar with snap hooks at ends, D-ring at center x 2' (61 cm).

1231470

Y-Lanyard
Y-Lanyard without spreader bar x 2' (61 cm).

AK020A1

3M™ Protecta® Confined Space Pulley
Self-closing/locking carabiner fits up to 1/2" (1.3 cm) lifelines.

2108403

Steel Spreader Hook
Self-closing/locking 3/4" (1.9 cm) opening.




Winches

Used for | Raising and lowering
personnel and equipment



Retrieval SRL's

Used for | Fall arrest
Emergency rescue

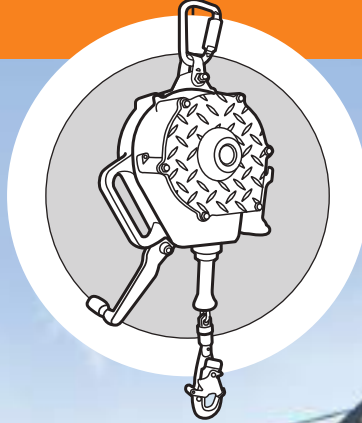

SRL's

Used for | Fall arrest only






Choosing a connector setup


Fall arrest/ rescue only:

Retrieval self-retracting lifeline is recommended where a ladder or other structure is present for ascending and descending the confined space.

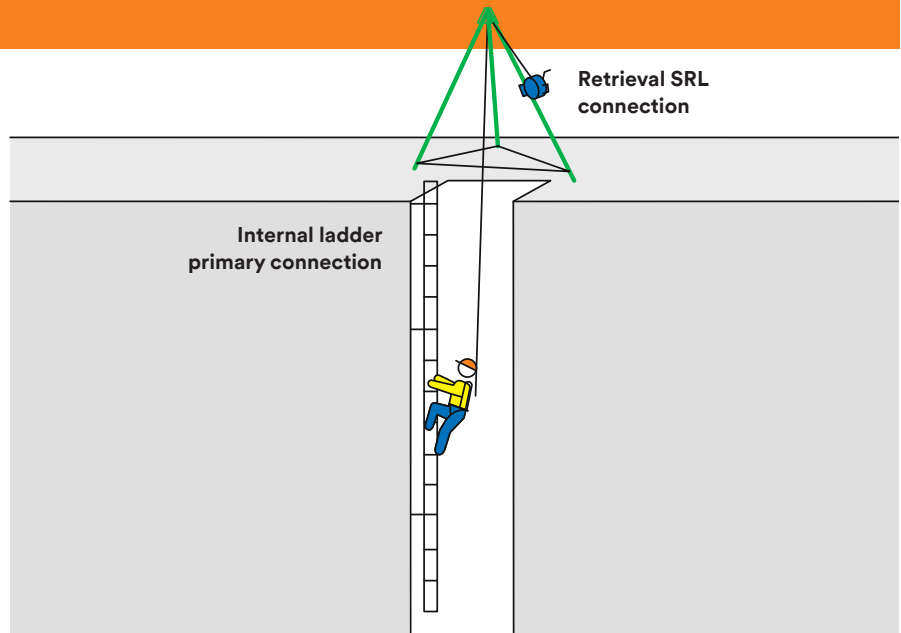


Entry/retrieval only:

Use retrieval self-retracting lanyard or man-rated winch in spaces where no fall hazard is present.

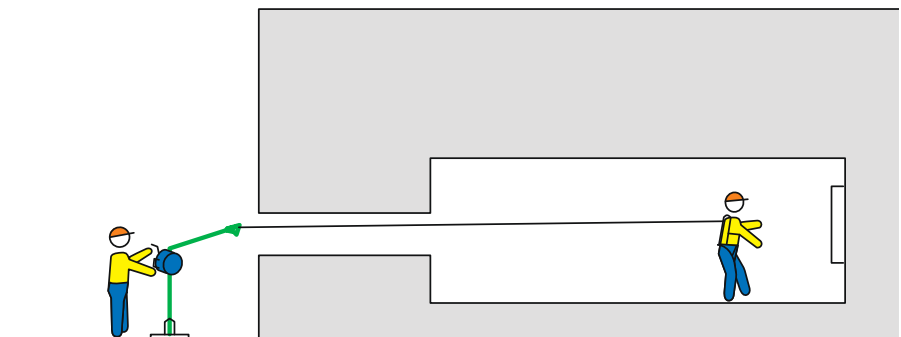

Fall arrest/ rescue and entry/ retrieval:

Use retrieval self-retracting lifeline and winch in a space with a fall hazard and where no ladder is present for ascending or descending.

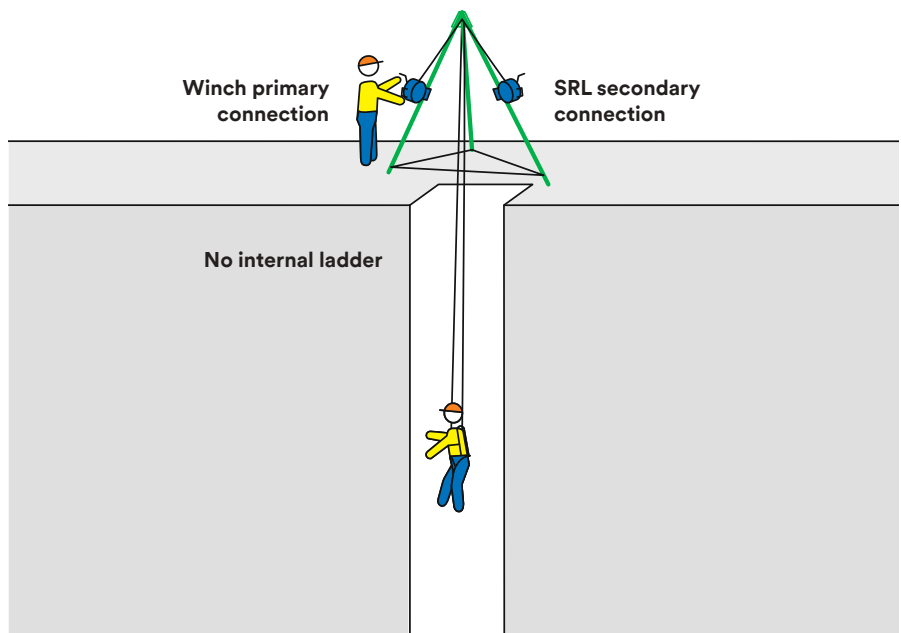

NOTE: For 3M's recommendation on the use of primary and secondary devices, please visit [3M.com/ConfinedSpace](https://www.3m.com/ConfinedSpace) for more information.

Winches

Digital vs. 3M™ DBI-SALA® Salalift™ II									
	Maximum Capacity	Great Ratio(s)	Power Drive Capability	Maximum Lifeline Length	Carrying Bag Included	Freewheel Capability	Mounting Bracket Included	Cycle Count Indicator	Sealed Bearings
Digital	450 lbs. (204.1 kg)	Two speeds (4:1 & 9:1)	Yes	290 ft. (88.4 m)	No	No	Yes	Yes	Yes
Salalift™ II	350 lbs. (158.8 kg)	One speed (6:1)	No	120 ft. (36.6 m)	Yes	Yes	Yes	No	No

Digital Winch

Drive Type	Lifeline Type	Mounting Bracket	60 ft. (18 m)	90 ft. (27 m)	140 ft. (42 m)	190 ft. (58 m)	240 ft. (73 m)	290 ft. (88 m)
Power drive*	Galvanized steel	■	8518567	8518568	8518588	8518589	8518610	8518611
	Stainless steel	■	8518565	8518566	8518586	8518587	8518608	8518609
	Technora® rope	■	8518571					
Removable handle	Galvanized steel	■	8518560	8518561	8518581	8518582	8518603	8518604
	Stainless steel	■	8518558	8518559	8518579	8518580	8518601	8518602
	Technora® rope	■	8518564					
Cable model weight			30.5 lbs. (13.8 kg)	32.5 lbs. (14.7 kg)	40 lbs. (18.4 kg)	43 lbs. (19.5 kg)	50 lbs. (22.6 kg)	53.5 lbs. (19.5 kg)
Technora® rope model weight			27 lbs. (12.2 kg)					

Digital Winch



Power drive units require Overload Protection Clutch (8512936) — Not Included. Overload Protection Clutch used in conjunction with a drill for retrieving an entrant.

Salalift™ II Winch

Drive Type	Lifeline Type	Mounting Bracket	Winch Bag	50 ft. (15.2 m)	60 ft. (18 m)	90 ft. (27 m)	120 ft. (36.5 m)
Removable handle	Galvanized steel	■	■		8102001	8102009	8102005
	Stainless steel	■	■		8102003	8102011	8102007
	Technora® rope	■	■	8102050			
Cable model weight					30.5 lbs. (13.8 kg)	32.5 lbs. (14.7 kg)	38.5 lbs. (17.5 kg)
Technora® rope model weight				27 lbs. (12.2 kg)			

Salalift™ II Winch



Accessories



8517567




8512936



9507217

Model # 8517567	Digital Winch Carrying Bag
8512936	Overload Protection Clutch Note: required for use with power drive digital winches.
9507217	Salalift™ II Replacement Winch Bag Note: all Salalift™ II winches come standard with a bag.

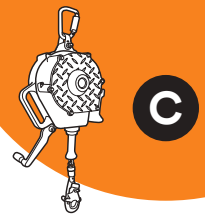

Retrieval SRLs

3M™ DBI-SALA® Sealed-Blok™ Self-Retracting Lifelines with Retrieval incorporate a concept that separates all dynamic components, including the motor spring and break, from foreign elements such as grease, moisture and dirt. Constructed from heavy-duty, corrosion-resistant materials, the sealed design meets IP69K rating.

- ▶ Available with RSQ Dual-Mode Design—allows users to select either standard fall arrest mode or automatic descent mode.
- ▶ Available lengths ranging from 30 ft (9.1m) to 175 ft (53.3m).
- ▶ IP69K Sealed Rating.



**Retrieval
Sealed-Blok™
SRL**



**Retrieval
Sealed-Blok™
SRL - RSQ**

3M™ DBI-SALA® Ultra-Lok™ Self-Retracting Lifelines with Retrieval are rugged, yet extremely lightweight and superbly engineered devices you can count on for safety, efficiency and comfort.

- ▶ Available in 50 ft length.



**Retrieval
Ultra-Lok™
SRL**

3M™ DBI-SALA® Sealed-Blok™ vs 3M™ DBI-SALA® Ultra-Lok™

	Maximum Capacity	Maximum Lifeline Length	Lifeline Type			RSQ Available
			Technora® rope	Galvanized	Stainless steel	
Sealed-Blok™	420 lbs. (190.5 kg)	175 ft. (53.3 m)	■	■	■	■
Ultra-Lok™	310 lbs. (140.6 kg)	50 ft. (15.2 m)		■	■	

Cable Type	Sealed-Blok™	Sealed-Blok™ Without Bracket	Sealed-Blok™/ RSQ Without Bracket	Ultra-Lok™	30 ft. (9.1 m)	50 ft. (15.2 m)	55 ft. (16.8 m)	85 ft. (25.9 m)	130 ft. (39.6 m)	175 ft. (52.5m)
Galvanized steel	■				3400853	3400923		3400871	3400976	
		■			3400850	3400920		3400870	3400975	3400660
			■			3400940		3400910	3401002	
				■		3501102				
Stainless steel	■				3400858	3400926		3400882	3400987	
		■			3400852	3400922		3400874	3400979	3400661
			■			3400942		3400912	3401004	
				■		3501103				
Technora® rope	■				3400840		3400843			

Accessories



**Model #
3401025**

Mounting Bracket for Sealed-Blok™ Retrieval SRL
Fits all sizes of Sealed-Blok™ Retrieval SRL.

Training Courses

We offer a variety of training and education courses to prepare employers and workers on proper use of safety equipment in confined spaces.

- ▶ On-site
- ▶ Classroom
- ▶ Online (digital/eLearning)

Part #	Course	Duration	Description
6480	Confined Space Level 1	1 Day	This course addresses basic principles and concepts of confined space safety and the role of the attendant and entrant in the process. This course is ideally suited for those who will either enter or serve as an attendant for those entering basic confined spaces at the worksite.
6482	Confined Space Level 2	2 Days	Participants will learn principles required to safely identify, assess, monitor, and/or enter the confined spaces they may encounter on their job site. Participants for this course are all those who may be involved with a confined space program at the worksite.
6491	Confined Space Industrial Rescuer Level 1	1 Day	The Confined Space Industrial Rescuer Level 1 program will teach participants basic principles of confined space entry rescue using pre-engineered systems for both horizontal and vertical extrications for standard confined space applications within normalized atmospheres. The course will include a focus on the development and implementation of on-site rescue planning. The course prerequisite is attendance in our Confined Space Level 1 course and cannot be taken as a standalone course.
6493	Confined Space Industrial Rescuer Level 2	2 Days	The Confined Space Industrial Rescuer level 2 program will teach participants principles of confined space entry rescue using pre-engineered systems for both horizontal and vertical extrications into normalized or potentially hazardous atmospheres. The course will include rescue planning and development, as well as problem solving strategies and techniques for more complex spaces. The course prerequisite is attendance in our Confined Space Level 2 course or equivalent type training.
7480	Confined Space Instructor	2 Days	The Confined Space Instructor will prepare participants for the delivery of our prescribed confined space safety curriculum designed for individuals serving as either attendants or entrants in basic confined space work environments. Participants successfully completing the course will be capable of delivering our established Confined Space Level I program. The course prerequisite is attendance in our Confined Space Level II course.

For additional information on any of these programs, please contact our program coordinators at **800.328.6146** option 4 for training, or visit us at 3M.com/SafetyTraining. In Canada, call **800.325.5776**.

Additional Confined Space Entry PPE Solutions

Supplied Air Solutions

Explore more at 3MScott.com.



Personal Protective Equipment

Explore more at 3M.com/PersonalSafety.



3M Fall Protection
3833 SALA Way
Red Wing, MN 55066 USA

Phone 800.328.6146
Email 3mfallprotection@mmm.com
Web 3M.com/ConfinedSpace

3M.com/ConfinedSpace

3M, DBI-SALA, ExoFit NEX, Salalift, Sealed-Blok and Ultra-Lok are trademarks of 3M Company. All other trademarks are property of their respective owners. © 3M 2019. All rights reserved.
Please recycle. Printed in USA. 70-0717-3955-4