

ASR 155

ON WATER, ICE, OR SNOW

The NRS ASR (All Surface Rescue) 155 Rescue Boat puts your rescue team where it needs to be. Backed by NRS's many years of boat-building expertise, rescuers rely on rugged dependability and efficient design for success in unpredictable situations.

- 52 oz., 2000 denier PVC tubes and floor material
- 4" thick drop-stitch center deck (25" x 96") provides rigid, stable working surface
- EVA foam on deck provides traction and protection
- End openings: 25" x 34"
- 5 air chambers with Leaffield™ A6 Pressure Relief Valves
- Top-quality Leaffield D7 and C7 Valves
- Hi-vis fabric and logos for visibility
- 3-year warranty

86090.01 | 15'5"L x 49"W | 12-9" diminishing tube dia. | kick bow/stern: 34"




Base boat package includes boat bag and paddles.



NRS

RESCUE

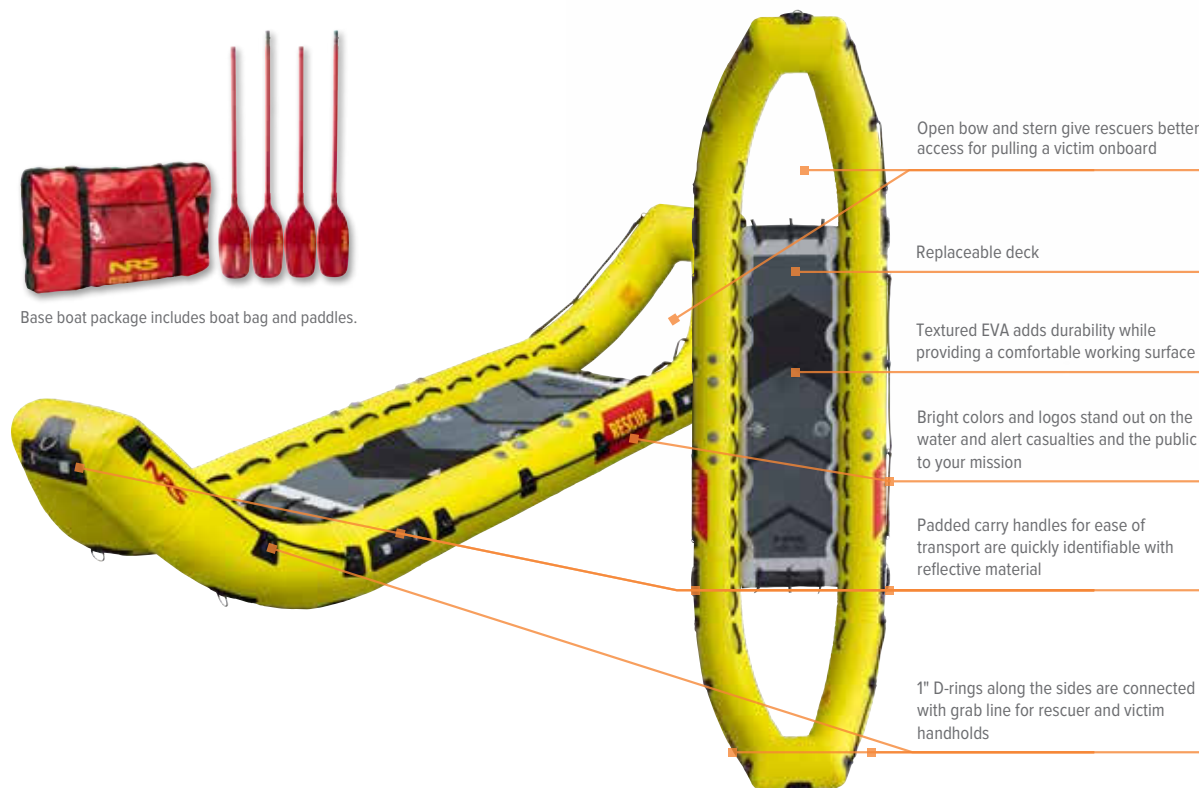

Three heavy-duty 2" D-rings on each end for towing and lifting and four side and two end carry handles are padded for ease of transport and quickly identifiable with reflective material.



Rescuers can grab any of the 26 interior handles in rough water or use them to attach gear or secure victims. 6 exterior handles.



An armored underside with multiple fabric layers resists the abrasion and damage from water obstacles, ice and crusted snow. Tubes feature durable directional runners/rubstrake on the bottom.