

ARIZONA VORTEX KIT





The Arizona Vortex Kit delivers a versatile tripod, bipod, and monopod in one all-inclusive package. Refined through years of development in the rugged highlands of northern Arizona, the Vortex Kit offers a combination of adaptability, ease of use, and rapid deployment that no other multi-pod can match.

FEATURES

- The Vortex provides an artificial high directional in virtually any urban, industrial, or wilderness application.
- Vortex bag set is now configured with a RigTech Pack™ and 2 redesigned Leg Bags to allow for single person transport.
- The precision-machined two-piece head can be rigged as a standard tripod, an A-frame, a gin pole, and many other configurations.
- Easily adjustable leg lengths and an articulating third leg allow the Vortex head to be positioned closer to an edge than a conventional tripod.
- Pulleys can be connected directly to the head, eliminating loss of clearance when working with high lines and tracking line offsets.
- Multiple attachment points on the head are useful for rope access applications where several lines may be needed over the edge.
- Both Raptor (pointed) and Flat (gimbale ball and socket) foot sets are included to allow secure setup on any terrain and application.
- The Arizona Vortex's hinged, articulating head allows the third leg to move independently of the other two, vastly increasing its versatility as a high directional anchor.
- Two foot sets (3 in each set) are provided in the Arizona Vortex Kit. Pointed "Raptor" feet allow setup in rough or rocky terrain. Gimbale ball and socket "Flat" feet are intended for use in urban or industrial environments.

KIT INCLUDES

- 2-Piece Head Set
- Head Set Pulley Wheel
- Quick Pins for Head (4)
- Inner Legs (3)
- Outer Legs (7)
- Quick Pins for Legs/Feet (17)
- Flat (Omni) Feet (3)
- Raptor (Claw) Feet (3)
- Orange Quick Pin Flags (21)
- Adjustable Hobble Straps (3)
- 12 m (40ft) 8 mm Tether Cord
- User Manual
- Vortex Bag System:
 - RigTech Pack™ (1)
 - Leg Bags with Shoulder Straps (2)
 - Sleeves for Foot Sets (2)
 - Storage bag for Quick Pins

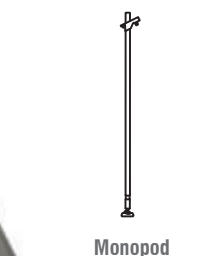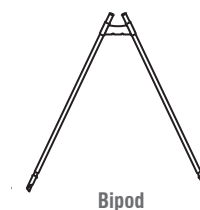

ITEM #	COLOR	NFPA RATING	3 SIGMA MBS	WEIGHT
727300	Blue/Orange/Brite	General Use	36 kN (8,093 lbf)	43 kg (70 lb)