


FIRE VULCAN® LED **LIGHTWEIGHT RECHARGEABLE LANTERN**

DESCRIPTION:	The Fire Vulcan® LED is a rechargeable, waterproof lantern featuring the latest in power LED technology for extreme brightness. Lithium-ion nanotechnology batteries make it the lightest weighing lantern in its category. The lantern includes two (2) ultra-bright blue taillight LEDs for rear visibility and a momentary switch providing programmable access to various modes of operation.		
CASE MATERIAL:	High-impact ABS thermoplastic housing in high-visibility orange with rubberized cushioned-grip handle.		
DIMENSIONS:	Length: 7.50 in (19.05 cm)	Width: 5.0 in (12.7 cm)	Height: 6.50 in (16.51 cm)
WEIGHT:	1.85 lbs (839 g) with battery.		
LENS:	Unbreakable polycarbonate with scratch-resistant coating. O-ring sealed.		
LIGHT SOURCE:	White LED, impervious to shock with a 50,000-hour lifetime. Two (2) ultra-bright blue taillight LEDs.		
LIGHT OUTPUT:	High: 100,000 candela peak beam intensity and 180 lumens measured system output. Low: 45,000 candela peak beam intensity and 80 lumens measured system output. Deep-dish parabolic reflector produces a tight beam with optimum peripheral illumination to aid in navigation. Optimized electronics provide regulated intensity.		
ON/OFF:	Push and hold momentary toggle switch to access 8 modes of operation. Left Modes: (Optional Programmable 2, 3, or 4) 1 - Steady High LED / Steady taillights 2 - Steady Low LED / Steady taillights 3 - Steady High LED / No taillights 4 - No LED / Steady taillights Right Modes: (Optional Programmable 2, 3, or 4) 1 - Steady High LED / Blinking taillights 2 - Steady Low LED / Blinking taillights 3 - Blinking High LED / No taillights 4 - No LED / Blinking taillights		
RUN TIME:	Steady High LED only: 5 hours to the 10% output level. Steady High LED & taillights: 4.25 hours to the 10% output level. Steady Low LED & taillights: 10 hours to the 10% output level. Blinking High LED only: 7 hours to the 10% output level. Blinking taillights only: 60 hours.		
BATTERY:	Two (2) lightweight lithium-ion nanotechnology cells. Recharges in 5 hours.		
FEATURES:	IPX7-rated design; waterproof to 1 meter for 30 minutes; floats. 1-meter impact resistance tested. Ultra-lightweight at 1.85 lbs. (839 g). LED technology and circuit to provide regulated light output throughout battery life. Serialized for positive identification. Fits existing Streamlight Vulcan® chargers.		
MODELS:	Standard System - Includes quick release buckle strap, charging rack and both AC and DC chargers. Vehicle Mount System - Includes quick release buckle strap and 12V DC vehicle-mountable direct-wire charging rack.		
APPROVALS*:	 Class I Division 2 Groups A, B, C, D; Class II Division 2 Groups F, G; Class III; Temperature Class T4  Meets applicable United Kingdom and European Community Directives. NFPA Charging rack meets requirements of NFPA 1900-11.1.11.2 (2024) mounted in any position.  CEC Compliant (Smart AC/DC Rack)		
WARRANTY:	Streamlight's Limited Lifetime Warranty		
ACCESSORIES:	100V, 230V or 240V AC (home) and 12V DC (automobile) charger cords.		

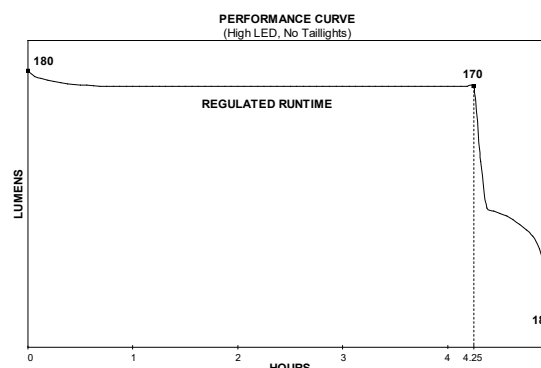

* See product for specific ratings.

Issued: 04/07/2008

Revised: 03/12/2024 Rev: 4

Assembled in the USA.

Document #241