

PFP-20HPHND-2D

HONDA POWERED HIGH VOLUME PUMP

This pump is the ideal tool to fill your fire truck, supply your pump truck or carry water over a long distance.

Also available in skid version



ENGINE SPECIFICATIONS

- GX630 Honda air cooled engine
- V-Twin cylinder, 4-stroke gasoline engine
- Electric start
- 6 gallon (22 l) detachable fuel tank

PUMP UNIT SPECIFICATIONS

- C.E.T. single stage centrifugal pump
- Pump body made from high resistance aluminum alloy
- Bronze impeller
- Mechanical shaft seal
- Exhaust priming system, guaranteed up to 20' (6 meter) lift
- Two 2 1/2" (65 mm) delivery outlet with 1/4-turn ball valve
- One 4" (100 mm) suction inlet
- Dimensions: Length: 21 1/4" (540 mm)
Width: 26 1/2" (673 mm); Height: 24" (610 mm)
- Weight: 198 lbs (90 kg)


INCLUDED ACCESSORIES

- 36 watts alternator.
- Low oil alert
- Pressure gauge.
- 12-V battery

PERFORMANCE

MAX FLOW : 630 GPM
MAX PRESSURE : 105 PSI
410 GPM @ 25 PSI

300 GPM @ 50 PSI
185 GPM @ 75 PSI
100 GPM @ 100 PSI

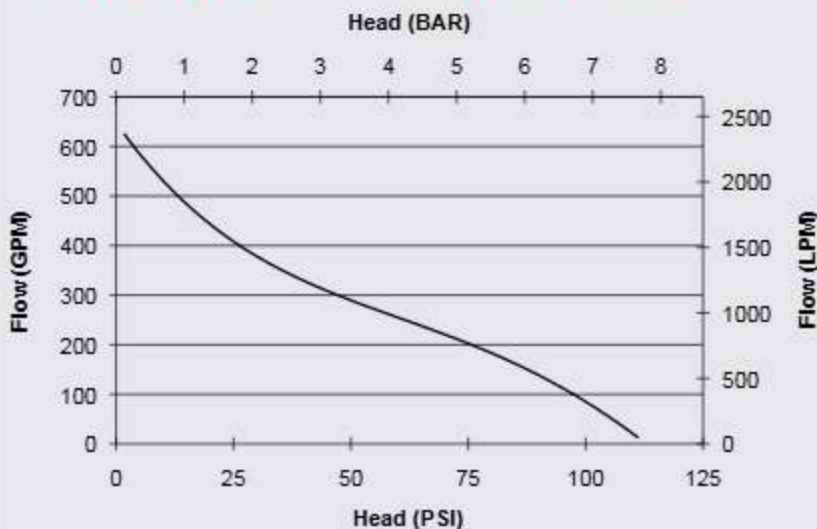

MMAA

LIMITED WARRANTY

- 3 YEARS



ACCEPT ONLY THE BEST



A CENTURY
OF ENGINEERING
FOR THE BRAVEST

75 Hector St., P.O. Box 90,
Pierreville (Québec)
Canada J0G 1J0
Phone : 1-800-567-2719
Fax : 1-800-434-2613
www.fire-pumps.com