




PRODUCT FACT SHEET

POLYTAC® // POLYTAC® HP

LITHIUM BATTERY POWERED POLYMER FLASHLIGHT

- DESCRIPTION:** The PolyTac® is a bright and compact personal polymer light available with the latest in power LED technology and three different user-selectable programs. The light features a superior grip texture to provide a comfortable but slip-resistant feel. Packaged with a removable pocket clip.
- CASE MATERIAL:** High-impact, super tough nylon polymer for exceptional durability and a sure grip. All openings O-ring or gasket sealed. Available in black, yellow, or coyote.
- DIMENSIONS:**
- | | PolyTac®: | PolyTac® HP: |
|-----------------|--------------------|---------------------|
| Length: | 5.34 in (13.56 cm) | 5.90 in (14.98 cm) |
| Body Diameter: | 1.00 in (2.54 cm) | 1.00 in (2.54 cm) |
| Head Diameter: | 1.25 in (3.18 cm) | 1.68 in (4.26 cm) |
| Major Diameter: | 1.36 in (3.45 cm) | |
- WEIGHT:** **PolyTac®:** 4.2 oz (121 g) with battery **PolyTac® HP:** 5.2 oz (148 g) with battery
- LENS:** **PolyTac®:** Glass lens, O-ring sealed.
PolyTac® HP: Unbreakable polycarbonate with scratch-resistant coating, O-ring sealed.
- LIGHT SOURCE:** LED technology, impervious to shock with a 50,000-hour lifetime.
- LIGHT OUTPUT:** See charts for specific model.
- RUN TIME:** See charts for specific model. All claims to 10% of initial lumen output. Strobe Run Time: 5h 30 min.
- ON/OFF:** Multi-function, push-button tactical tail switch. One-handed operation of momentary, variable intensity, or strobe mode. TEN-TAP® programmable switch allows for user selection of one of three different programs: high/strobe/low (factory default), high only, or low/medium/high.
- BATTERIES:** Two (2) 3-volt CR123A lithium batteries with a shelf life of 10 years.
WARNING - EXPLOSION RISK, BURN, AND FIRE HAZARD. Do not use SL-B9™ batteries in firefighting apparatus or fire situations. Do not expose SL-B9™ battery to temperatures greater than 140 °F (60 °C).
- FEATURES:**
- 
- LED Solid State Power Regulation provides maximum light output throughout battery life.
IPX7-rated design; waterproof to 1 meter for 30 minutes.
3-meter impact resistance tested.
Superior grip texture for sure grip.
TEN-TAP® programmable switch allows for user selection of one of three different programs.
Removable pocket clip.
Serialized for positive identification.
- APPROVALS:**   Meets applicable United Kingdom and European Community Directives.
NFPA PolyTac® meets the requirements of NFPA 1971-8.6 (2018).
Note: PolyTac® HP is not recommended for fire helmet mounting.
- WARRANTY:** Streamlight's Limited Lifetime Warranty
- OPTIONAL ACCESSORIES:** **PolyTac®:** Holster, safety wands, colored flip lenses **PolyTac® HP:** N/A

	POLYTAC®				POLYTAC® HP			
	FLY PROGRAM	HIGH	MEDIUM	LOW	FLY PROGRAM	HIGH	MEDIUM	LOW
OUTPUT		600 LUMENS	260 LUMENS	35 LUMENS		600 LUMENS	260 LUMENS	35 LUMENS
RUN TIME		2h 45min	5h 30m	34h		2h 45min	5h 30m	34h
DISTANCE		214m	140m	52m		297m	195m	72m
INTENSITY		11,500cd	4,900cd	675cd		22,000cd	9,500cd	1,300cd

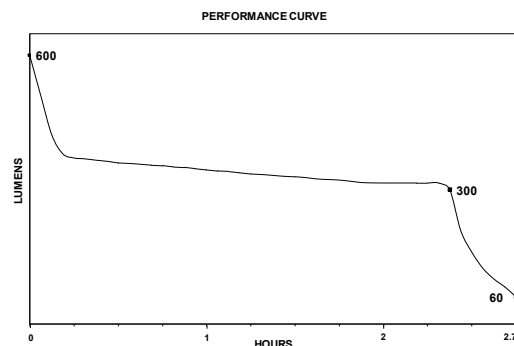

All performance claims tested to ANSI/PLATO FL1-2016 Standard

Issued: 10/24/2013

Revised: 04/16/2024 Rev: 3

Made in China.

Document #313