


The Streamlight Poly Mount kit conveniently attaches a variety of Streamlight flashlights to a hardhat for hands-free use. It's a “no tools required” method to quickly and easily attach your flashlight to your hardhat and it's adjustable so you can aim the beam where you need it.



Shown with Dualie 2AA (not included)
using adhesive base

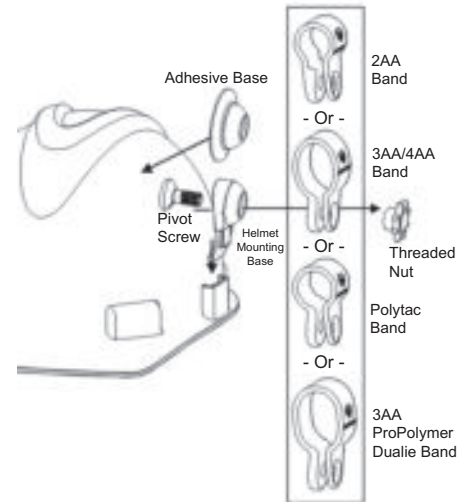

Shown with Dualie 2AA (not included)
using slot attachment

1. Select desired mounting base and flashlight band.
2. Insert pivot screw through rear opening on the selected base.
3. Place selected band onto the threads of the screw (Streamlight logo outward).
4. Loosely attach threaded nut then attach assembled mount to helmet.
5. Install and align flashlight to the desired position and tighten the threaded nut.

Poly Mount Kit includes:

Adhesive base to attach to side of hard hat
Mounting base that slides into the slot of hard hat

Bands for:

| | |
|-------------------------|-------------------------|
| Dualie® 2AA | 2AA ProPolymer® HAZ-LO® |
| Dualie® 3AA | 4AA ProPolymer Lux |
| Dualie® 3AA Color-Rite® | PolyTac®/PolyTac® X |
| Dualie® Rechargeable | |

#68089 Poly Mount Kit

#67751 Dualie 2AA with alkaline batteries - Box - Yellow
 #68751 Dualie 3AA with alkaline batteries - Box - Yellow
 #68910 Dualie 3AA Color-Rite with alkaline batteries - Box - Yellow
 #68793 Dualie Rechargeable 120V AC - Box - Yellow
 #67101 2AA ProPolymer HAZ-LO with alkaline batteries - Clam - Yellow
 #68244 4AA ProPolymer Lux Div 2 with alkaline batteries - Clam - Yellow
 #68602 4AA ProPolymer Lux Div 1 with alkaline batteries - Clam - Yellow
 #88853 PolyTac with lithium batteries - Clam - Yellow
 #88604 PolyTac X with lithium batteries - Box - Yellow

Poly Mount Kit works with the following:
(lights not included)



Dualie® 2AA



Dualie® 3AA/Dualie® 3AA Color-Rite®



Dualie® Rechargeable



4AA ProPolymer® Lux



2AA ProPolymer® HAZ-LO®



PolyTac®/PolyTac® X