



STREAMLIGHT®

POLYTAC® ALL-PURPOSE POLYMER FLASHLIGHT



Material/Lens High-impact, super tough nylon polymer for exceptional durability. A superior grip texture provides a comfortable, but slip-resistant feel. All openings O-ring sealed for weather resistance. Available in black, coyote, or yellow. Unbreakable polycarbonate lens with scratch-resistant coating.

Dims/Weight	IMPERIAL	Length: 5.34 in	Head Diameter: 1.25 in	Body Diameter: 1.0 in	Major Diameter: 1.36 in	Weight: 4.2 oz
	METRIC	Length: 13.56 cm	Head Diameter: 3.18 cm	Body Diameter: 2.54 cm	Major Diameter: 3.45 cm	Weight: 121 g

Light Source/ White LED, impervious to shock with a 50,000-hour lifetime.

Output

	HIGH	MEDIUM	LOW
LUMENS	600	260	35
CANDELA	11,500	4,900	675
DISTANCE	214 m	140 m	52 m
RUN TIME	2.75 hours	5.5 hours	34 hours

Strobe runs 5.5 hours

Switch Multi-function, push-button tactical tail switch. One-handed operation of momentary, variable intensity, or strobe mode. TEN-TAP® programmable switch allows for user selection of one of three different programs: high/strobe/low (factory default), high only, or low/medium/high.

Battery Two 3-volt CR123A lithium batteries.
WARNING – EXPLOSION RISK, BURN, AND FIRE HAZARD. Do not use SL-B9™ batteries in firefighting apparatus or fire situations. Do not expose SL-B9™ battery to temperatures greater than 140 °F (60 °C).

Features

- Superior grip texture
- Removable pocket clip
- IPX7-rated design; waterproof to 1 meter for 30 minutes
- 3-meter impact resistance tested

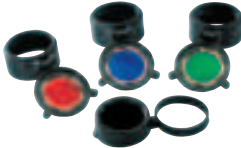
Approvals Meets applicable United Kingdom and European Community Directives.
Flashlight meets 500°F requirements of NFPA 1971-8.6 (2018).

Warranty Streamlight warrants this product to be free of defects for a lifetime of use except for batteries and bulbs, abuse, and normal wear. We will repair, replace, or refund the purchase price of this product should we determine it to be defective. This limited lifetime warranty also excludes rechargeable batteries, chargers, switches, and electronics which have a 2-year warranty with proof of purchase. THIS IS THE ONLY WARRANTY, EXPRESSED OR IMPLIED, INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. INCIDENTAL, CONSEQUENTIAL, OR SPECIAL DAMAGES ARE EXPRESSLY DISCLAIMED EXCEPT WHERE SUCH LIMITATION IS PROHIBITED BY LAW. You may have other specific legal rights which vary by jurisdiction. Visit streamlight.com for full warranty information.

Description	UPC	Item #
PolyTac – Includes two CR123A lithium batteries – Blister – Black	080926-88850-0	88850
PolyTac – Includes two CR123A lithium batteries – Blister – Coyote	080926-88851-7	88851
PolyTac – Includes two CR123A lithium batteries – Blister – Yellow	080926-88853-1	88853



The Streamlight Poly Mount conveniently attaches the PolyTac to a helmet and features a curved interface for fully adjustable positioning of the flashlight beam. Includes a slot adapter and an adhesive mounting option.

	Description	UPC	Item #
	Nylon Holster	080926-85905-0	85905
	Flip Lens Red	080926-85115-3	85115
	Flip Lens Blue	080926-85116-0	85116
	Flip Lens Green	080926-85117-7	85117
	Flip Lens IR	080926-74039-6	74039
	Rubber Helmet Strap	080926-99075-3	99075
	Safety Wand - Red	080926-74903-0	74903
	Safety Wand - Yellow	080926-74904-7	74904
	Safety Wand - Glow in the Dark	080926-74913-9	74913
	4AA / 3AA / PolyTac Helmet Mount	080926-68085-2	68085
	Poly Mount Kit	080926-68089-0	68089
	Lithium Batteries - 2 PK	080926-85175-7	85175
	Lithium Batteries - 6 PK	080926-85180-1	85180
	Lithium Batteries - 12 PK	080926-85177-1	85177
	Lithium Batteries - 400 PK	080926-85179-5	85179