


VENTMASTER® CUTOFF SAWS

GAS-POWERED FIRE RESCUE CUTOFF SAWS

FROM TEMPEST TECHNOLOGY

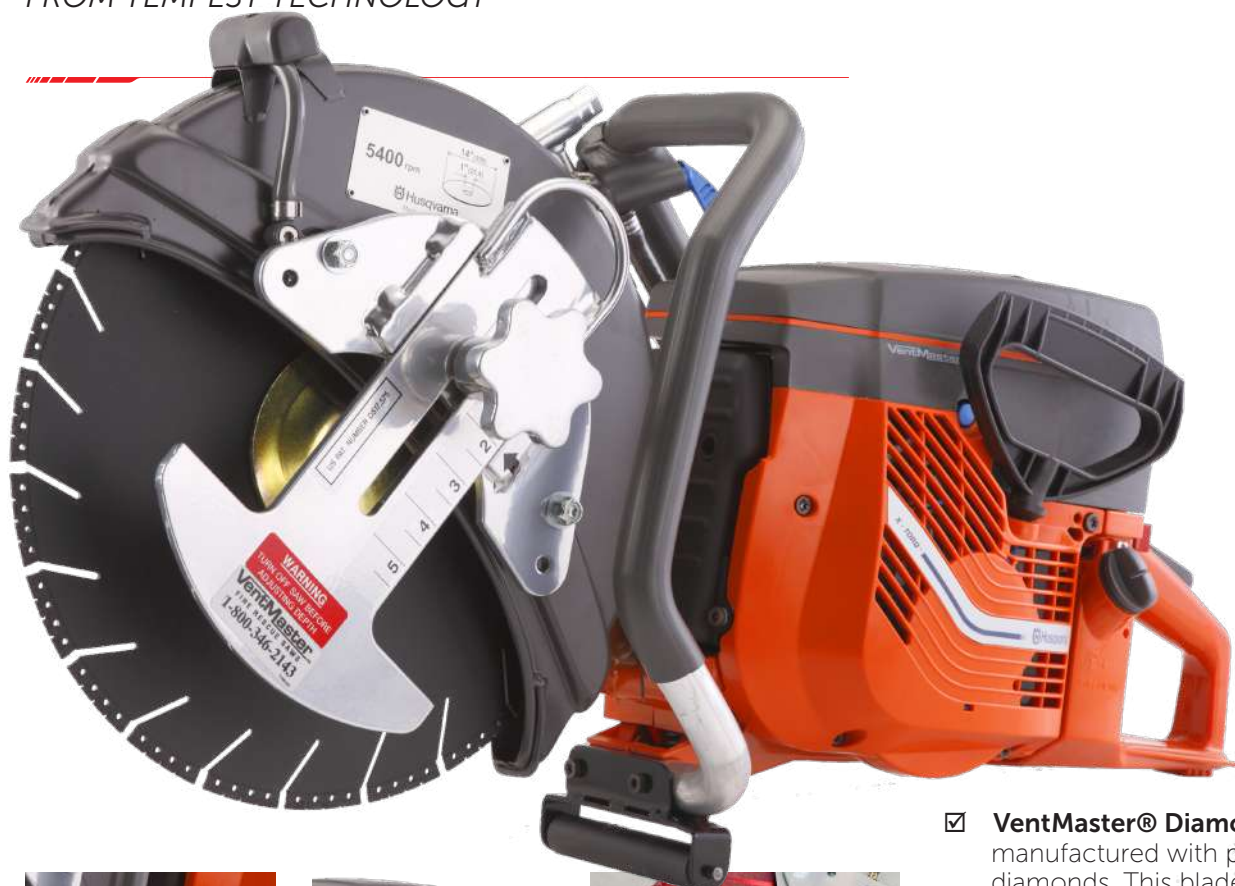

Bottom Roller Assembly




D-Ring
Starter Handle



Tool-Less "KIS-360"
Aluminum Depth Gauge

- ☑ **VentMaster® Diamond Blades** are manufactured with premium grade diamonds. This blade cuts anything without loss of cutting depth
- ☑ **DuraStarter™** Low maintenance, patented, dust-sealed starter unit, for the highest reliability
- ☑ **SmartCarb™** Built-in automatic filter compensation, maintains high power and lowers fuel consumption.
- ☑ **Tool-Less "KIS-360" Depth Gauge**
Our patented depth gauge allows for precise control cutting depths
- ☑ **Bottom Roller Assembly** provides a resting place for the saw during long cuts to give the user better balance and control.

Pound for pound these are the most powerful and dependable Rescue Cutoff Saws in the business! Our Husqvarna® powerheads provide the necessary size and power range for any application.

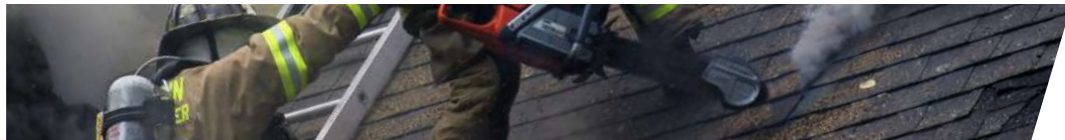

Available Kits

TV406-506 Ventmaster Cutoff Saw 375K with DEPTH GAUGE, NO BLADE	
TV406-506B	Kit Includes: Depth Gauge + VENTMASTER MULTI-USE DIAMOND BLADE
TV406-506C	Kit Includes: Depth Gauge + CONCRETE DIAMOND BLADE
TV406-506D	Kit Includes: Depth Gauge +DUCTILE IRON DIAMOND BLADE
TV406-606 Ventmaster Cutoff Saw 397K with NO DEPTH GAUGE, NO BLADE	
TV406-606B	Kit Includes: VENTMASTER MULTI-USE DIAMOND BLADE
TV406-606C	Kit Includes: CONCRETE DIAMOND BLADE
TV406-606D	Kit Includes: DUCTILE IRON DIAMOND BLADE
TV406-706 Ventmaster Cutoff Saw 397K with DEPTH GAUGE, NO BLADE	
TV406-706B	Kit Includes: Depth Gauge + VENTMASTER MULTI-USE DIAMOND BLADE
TV406-706C	Kit Includes: Depth Gauge + CONCRETE DIAMOND BLADE
TV406-706D	Kit Includes: Depth Gauge +DUCTILE IRON DIAMOND BLADE
TV406-507 Ventmaster Cutoff Saw 375K with DEPTH GAUGE, NO BLADE	
TV406-507B	Kit Includes: Depth Gauge + VENTMASTER MULTI-USE DIAMOND BLADE
TV406-507C	Kit Includes: Depth Gauge + CONCRETE DIAMOND BLADE
TV406-507D	Kit Includes: Depth Gauge +DUCTILE IRON DIAMOND BLADE
TV406-707 Ventmaster Cutoff Saw 397K with NO DEPTH GAUGE, NO BLADE	
TV406-707B	Kit Includes: VENTMASTER MULTI-USE DIAMOND BLADE
TV406-707C	Kit Includes: CONCRETE DIAMOND BLADE
TV406-707D	Kit Includes: DUCTILE IRON DIAMOND BLADE
TV406-074	14" Multi-Use Ventmaster Diamond Blade
TV406-081	14" Concrete Diamond Blade
TV406-091	14" Ductile Iron Diamond
TV406-105	14" Carbide Tipped Wood Cutting Blade
TV406-003	14" Abrasive Blade For Concrete
TV406-009	14" Abrasive Blade For Steel

Specifications

Powerhead Model	HUSQVARNA® K970
Power Output	6.5 HP / 4.8 kW
Weight (lb / kg)	31.5 / 14.3
Height / Width / Length (inch/mm)	19 x 8.4 x 27 / 482 x 213 x 685
Noise Level at Operator's ear	104 db