

# TEMPEST

Fighting for performance

**NEW & AVAILABLE!**

INDUSTRY LEADING TECHNOLOGY AND DESIGN POWERED BY:  
HURST® Jaws of Life® E3™/EWXT™ Batteries

## VS-1.3H

### TEMPEST TECH SERIES BATTERY POWER BLOWERS



Powered by 2 HURST® Jaws of Life® E3™/EWXT™ 9Ah or 5Ah Rescue Batteries.



**35**

#### 35-Minute Run Time

With 2 removable HURST® Jaws of Life® E3™/EWXT™ 9Ah or 5Ah Rescue Batteries, the blower will run for an average of 35 minutes.



#### Removable Battery

Powered by 2 removable HURST® Jaws of Life® E3™/EWXT™ 9Ah or 5Ah Rescue Batteries.



#### Only 50 lbs. w/ 2 Batteries

Only 45 lbs. without batteries. Lightweight welded tubular aluminum frame design makes it easy to deploy on site.

US Patent #: US 11,333,291 B2



#### Battery Management System

The dynamic BMS built into the battery insures maximum performance and safety.



#### 10887 CFM tested to AMCA Standards

The VS-1.3 series produces the Highest Air Flow available in any battery blower.



#### FEATURING

Increased depth for greater stability  
Large 6" wheels for ease of rolling over obstacles



#### LED Flow-Path Lighting

Powerful LED lights positioned low for visibility below the smoke.




#### Ultra-Light™ Air Straightener

Ultra-Light™ Grill designed to reduce wasted airflow. Forces the air to flow straight out.



#### WARRANTY

Blower: 5 Year Limited Warranty  
Battery: Separate manufacturers' warranty

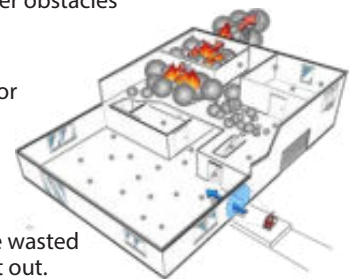

NOTE: Unit specification subject to change without notice.

4708 North Blythe Avenue, Fresno, California 93722  
tempest.us.com • response@tempest.us.com • 800.346.2143

# VS-1.3H

## TEMPEST TECH SERIES/TEMPEST POWER BLOWERS

POWERED BY: HURST® Jaws of Life® E3™/EWXT™ Batteries

tempest.us.com



### SPECIFICATIONS

<b>Airflow</b>	10,887 CFM (18,497m³/h) (calculated according to AMCA 240)	<b>Motor</b>	0.8 HP / 600W Variable Speed Drive BLDC Totally Enclosed, Air over IP65
<b>Weight</b>	With batteries 50 lbs. / Without batteries 45 lbs.	<b>Battery</b>	Removable HURST® Jaws of Life® E3™/EWXT™ 9Ah or 5Ah Rescue Batteries.
<b>Dimensions (L x H x D)</b>	Handle Down - 23.75"L x 25"H x 15.25"D Handle Up +4.9"	<b>Charging Time</b>	100% Charge in 2-hours with External Optional Charger
<b>Propeller Diameter</b>	18"	<b>Ingress Protection</b>	IP65 (excludes HURST® Jaws of Life® E3™/EWXT™ 9Ah or 5Ah Rescue Batteries)
<b>Run Time</b>	<i>Average run time at full speed 35 minutes with 2 x 9AH batteries</i>	<b>Drop Test</b>	Designed to resist a Drop Test of 1.5M / 5'
<b>Operating Temperature</b>	-5°F to +113°F	<b>Noise Level</b>	83.7dB at 3m-10'

### PRODUCT PART NUMBER

PART NUMBER	PRODUCT	INCLUDES
910-1880	VS-1.3H - without battery or charger	Electric Tall PPV Power Blower, Fold down Handle, Variable Speed Drive, 18" Impeller BLDC 0.8HP, 1 Shoulder Strap, No batteries, No Charger.

### AVAILABLE ACCESSORIES

725-070	 Flex Tube Ducting	610-1801	 Shoulder Carry Strap (1 is included with every VS1.3H)
725-049L	 Rehab Misting Ring	300-141 / 300-142	 Door Bar Holder and Bracket Set
		300-187	 (2) Pack Glow Wedges